 
 


Installation Manual

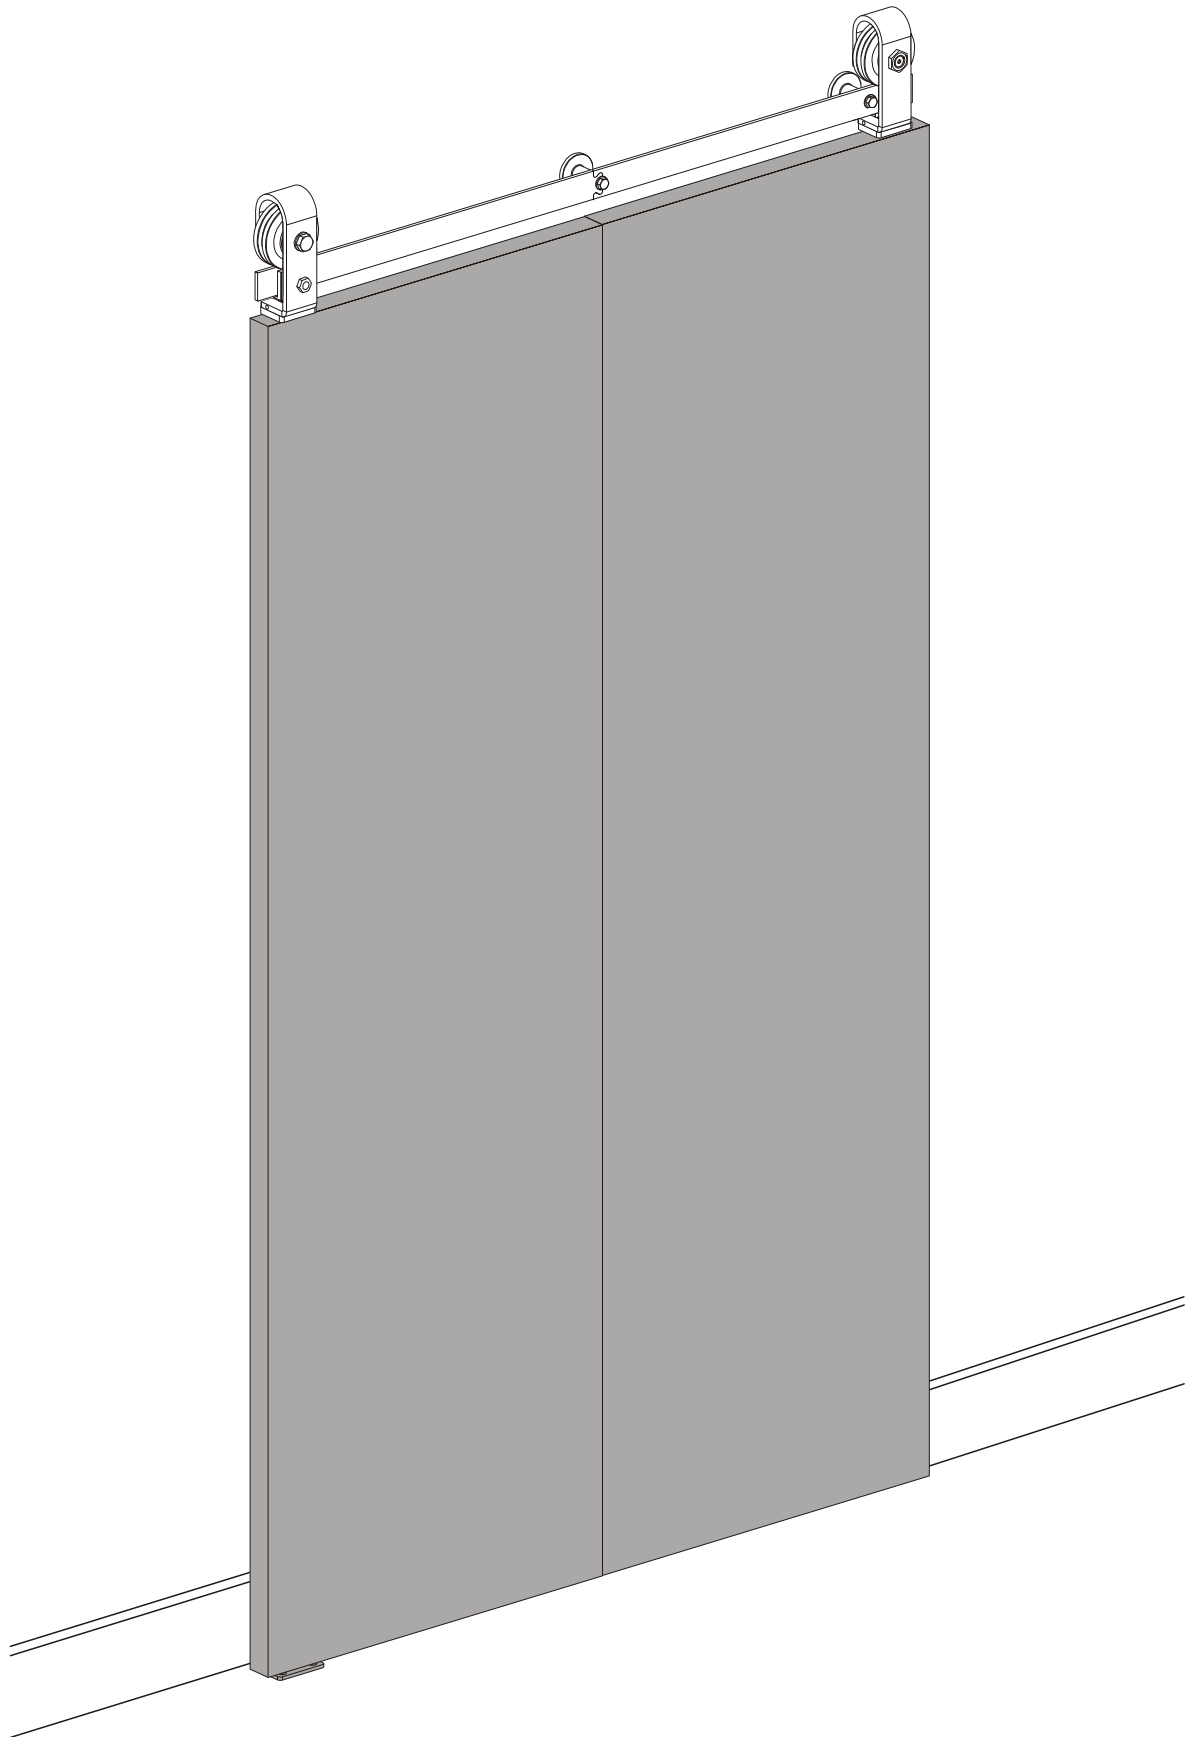 


Components list





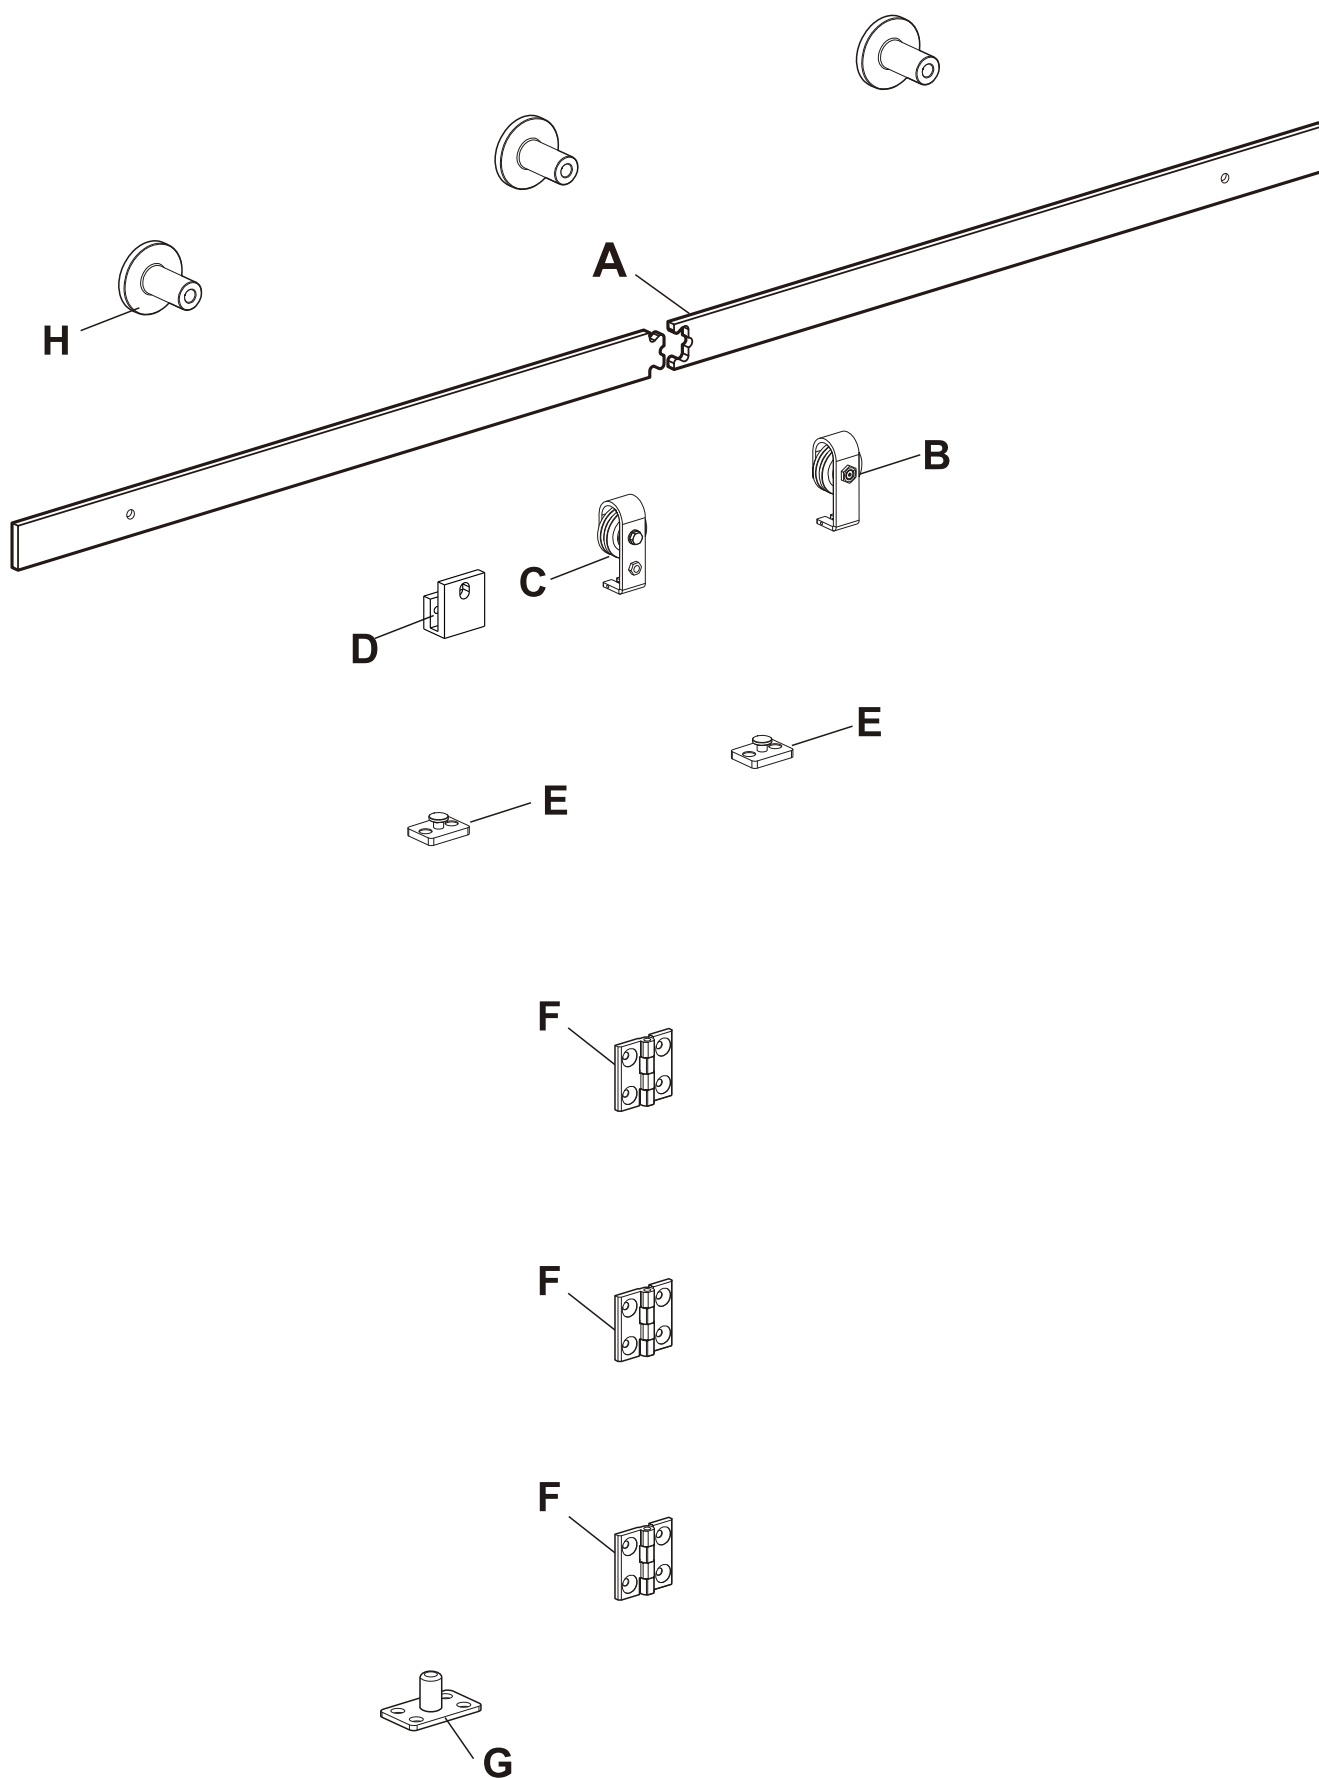


Pre-installation


TOOLS REQUIRED

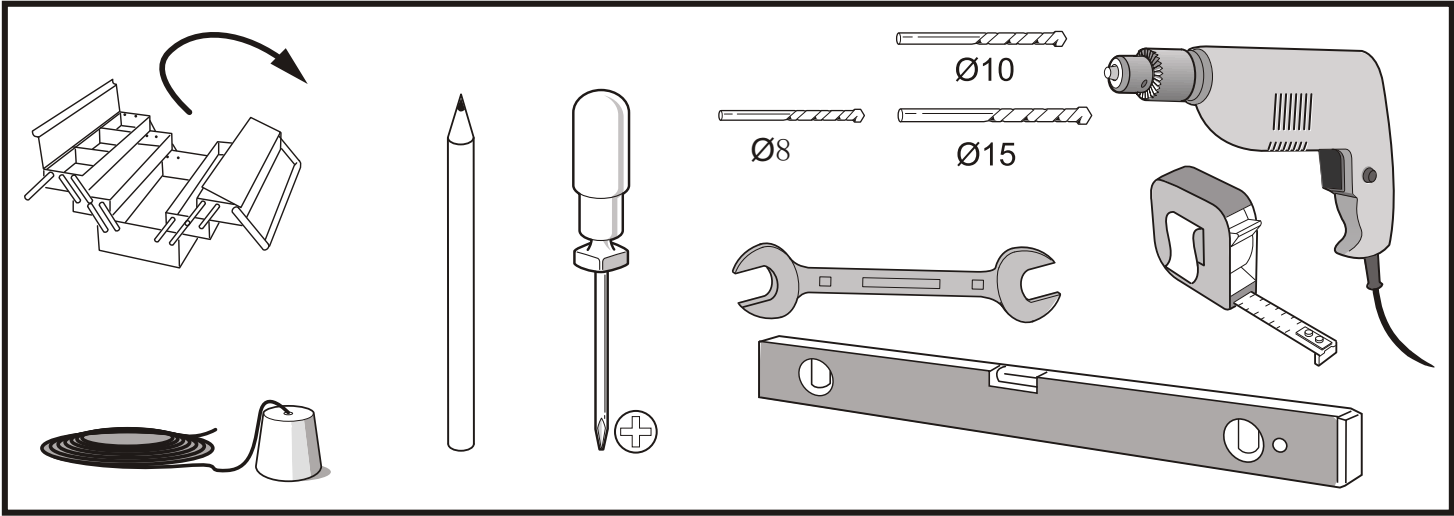

HARDWARE INCLUDED

    
 
A  (x3)  Ø10(x3)  M8x90(x3)		 (x1)  (x1)		B  (x1)	C  (x1)  (x1)  ST5x26(x1)
D  (x1)  ST5x6(x2)	E  ST4. 8x50(x4)  (x2)		F  (x3)  ST6x25(x12)		
G  (x1)  Ø8(x4)  ST4. 2x32(x4)	 (x1)		H  (x3)		
			I 		

 Installation

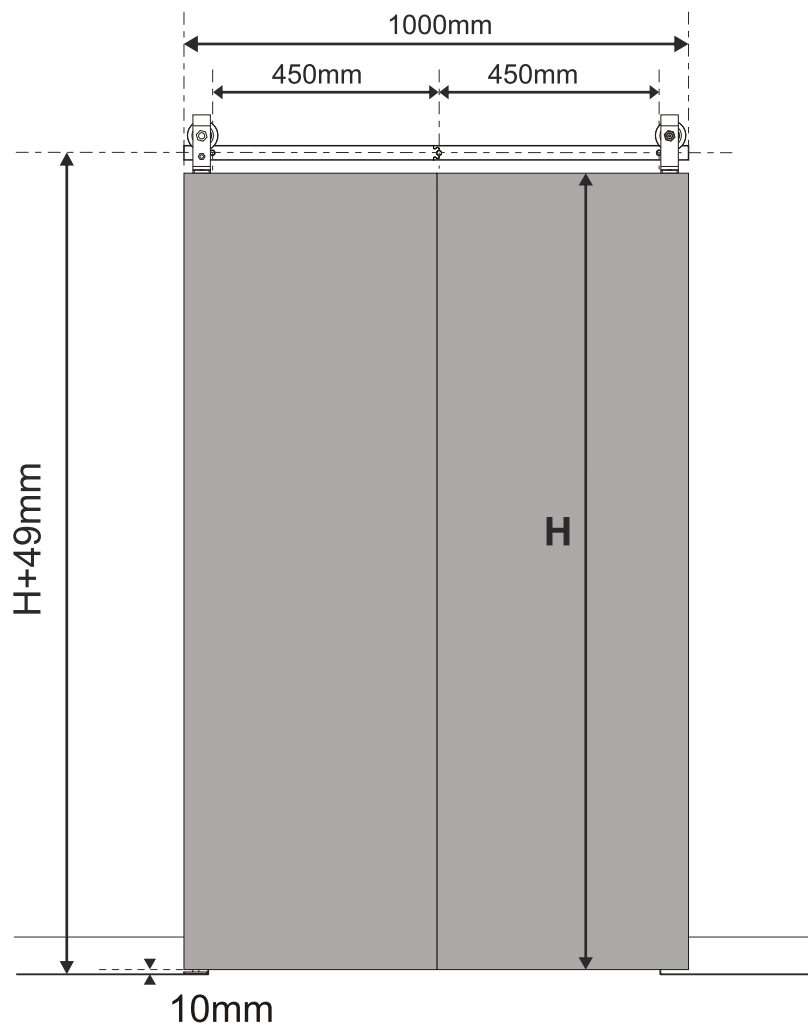


1

  A

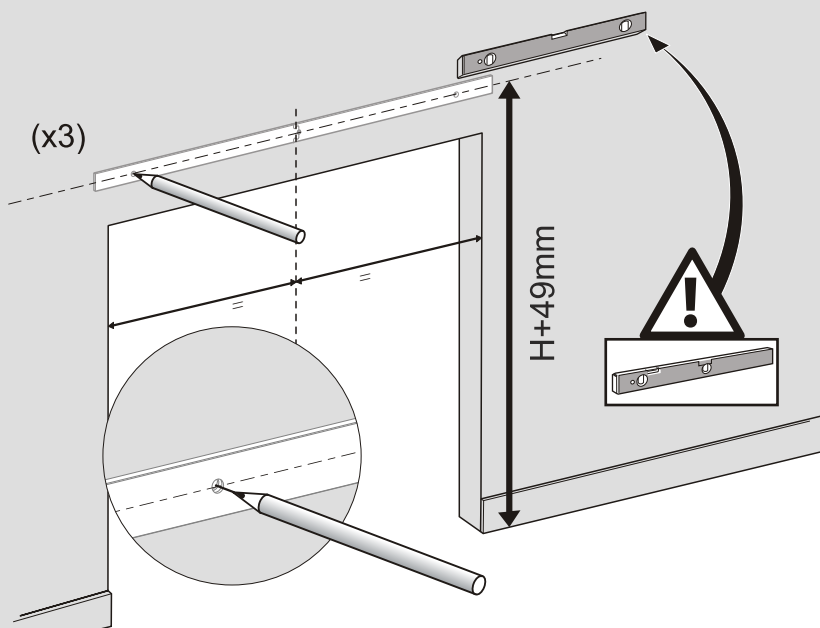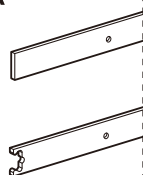

Installation

 2

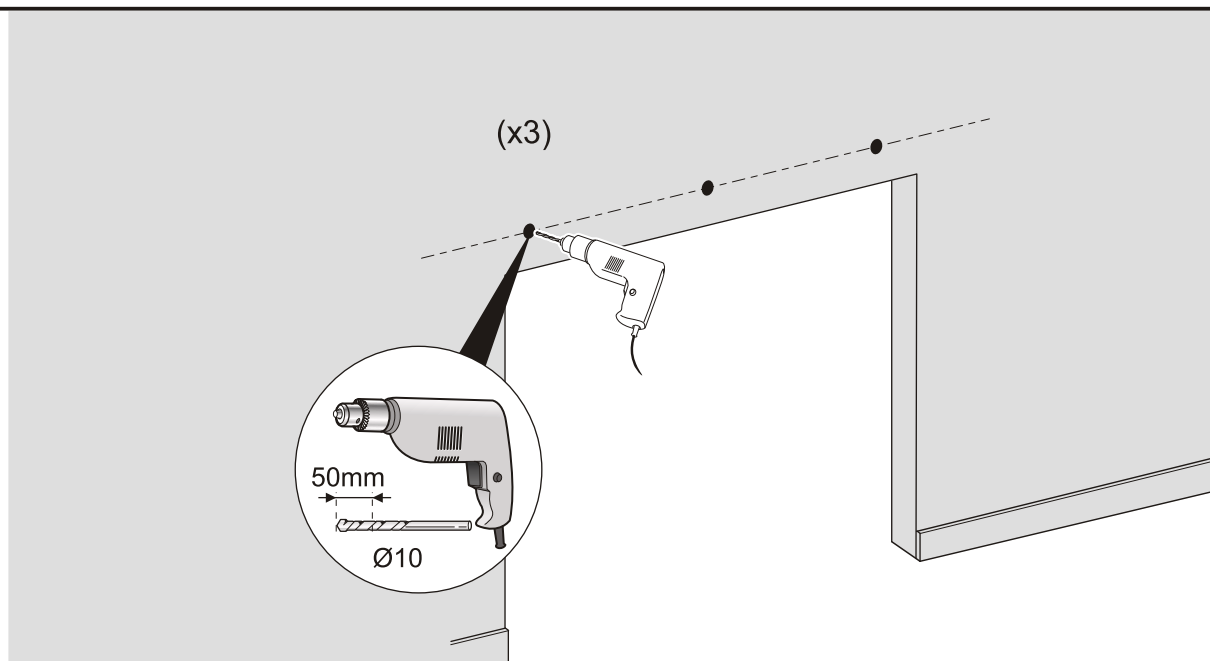


3

H





 
A

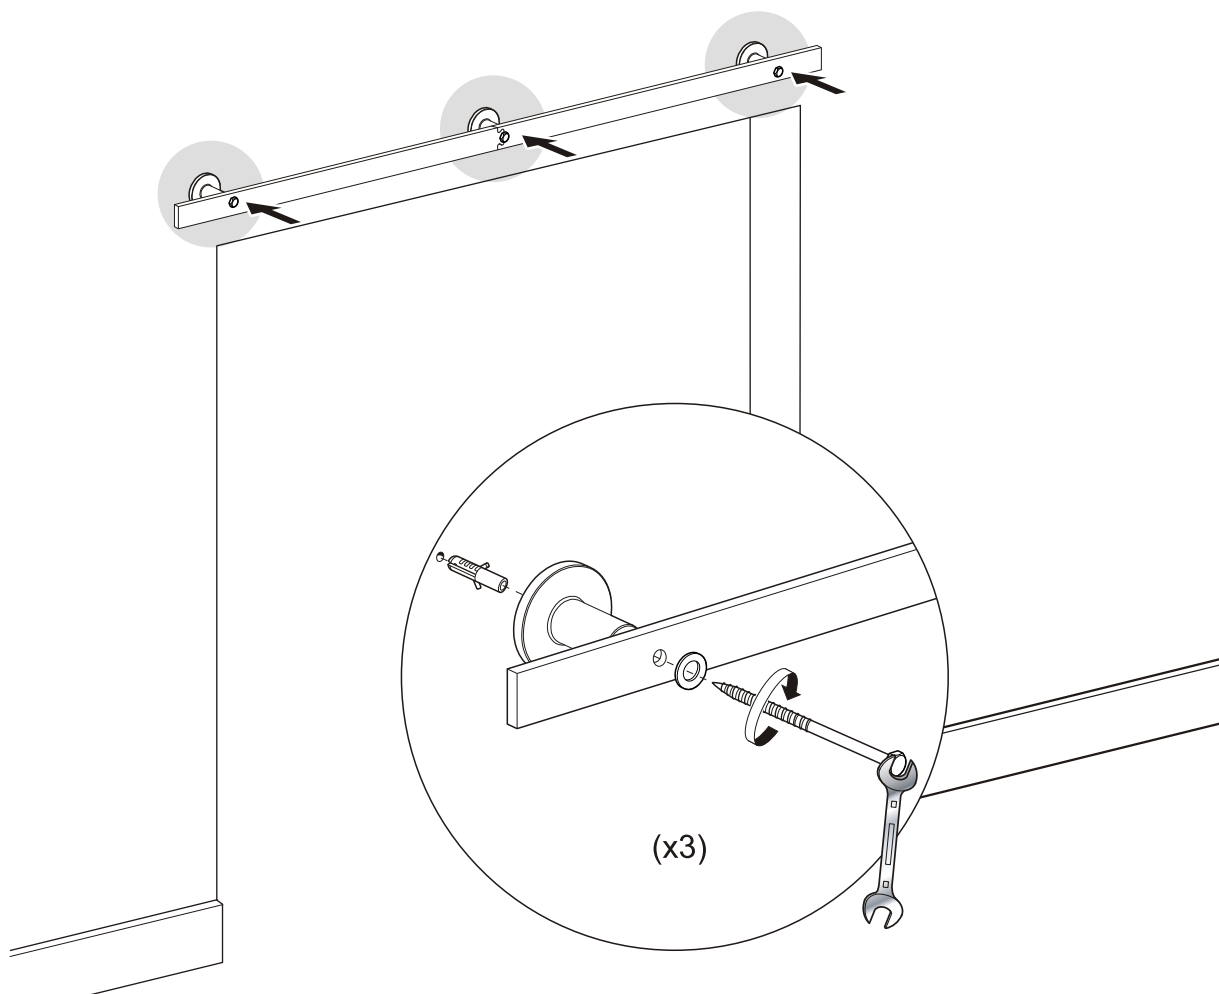

Installation

4


 
 
 
F

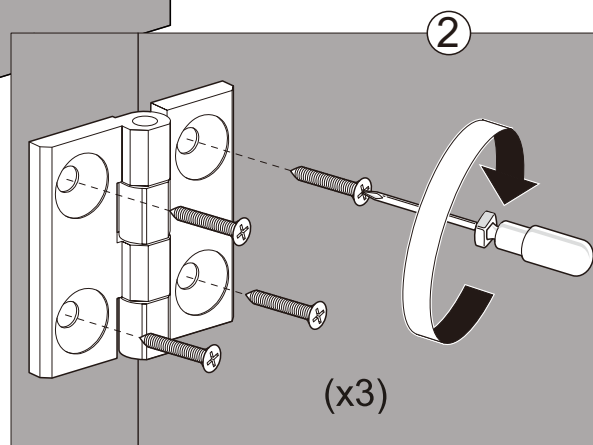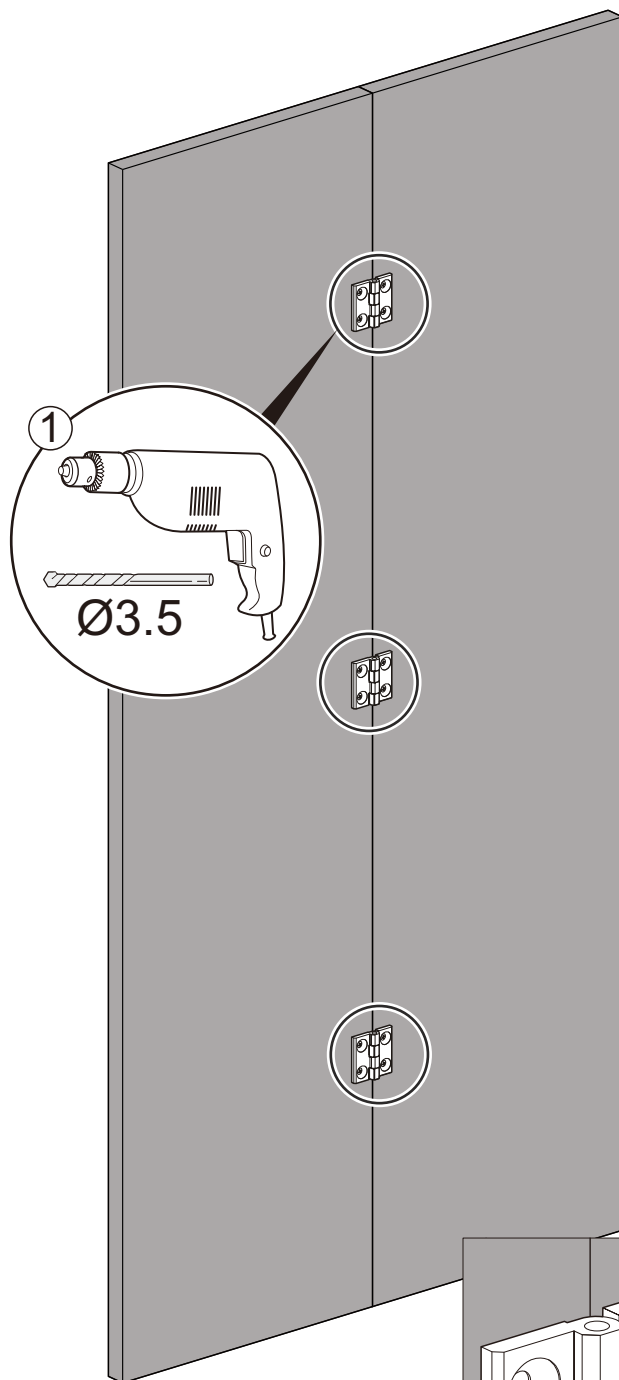

Installation

5

    E

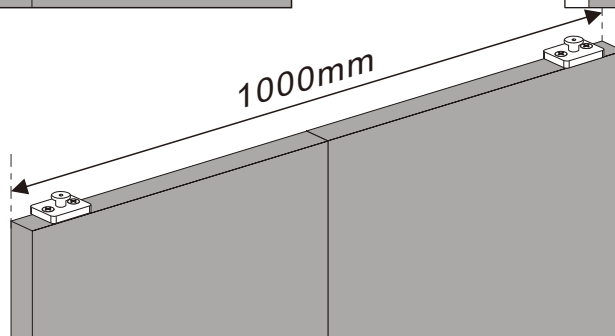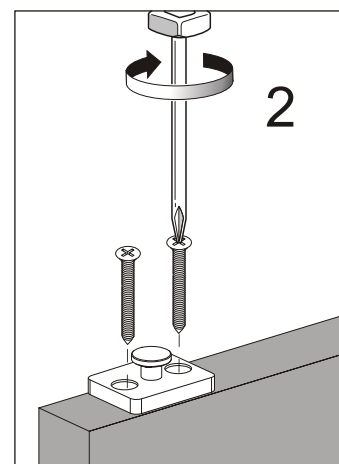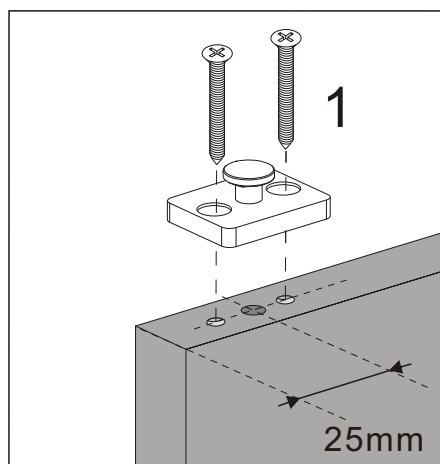


6

B







 
C

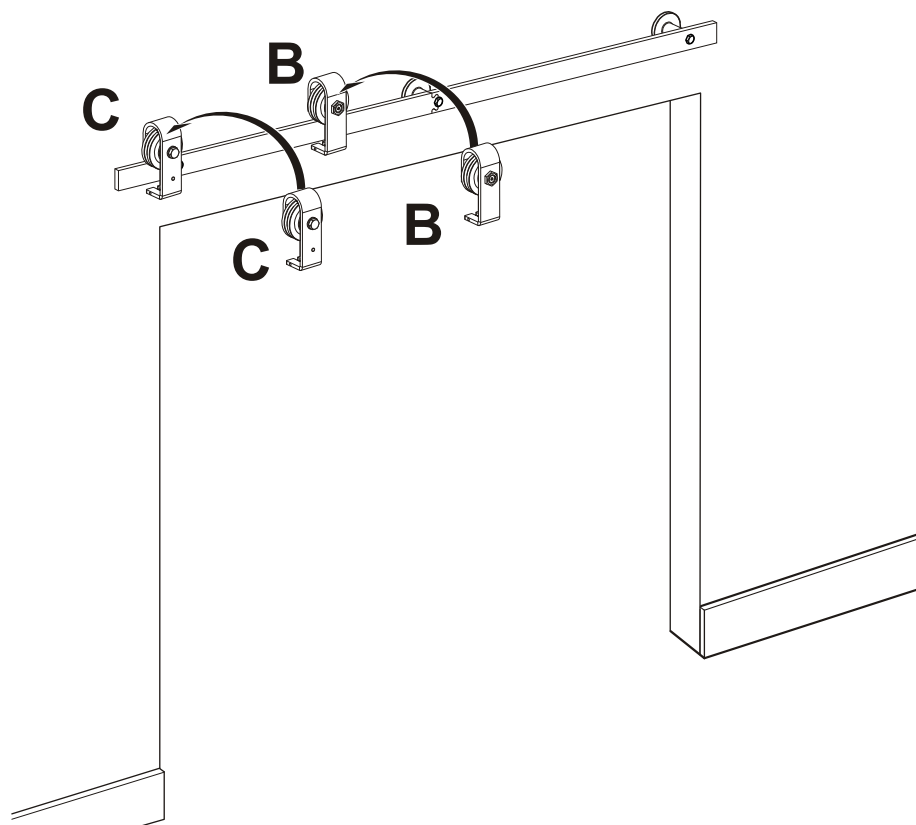

Installation

7

 
 
 
 
 
G

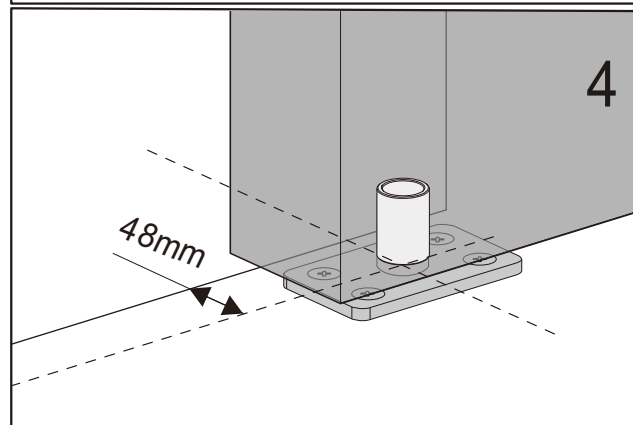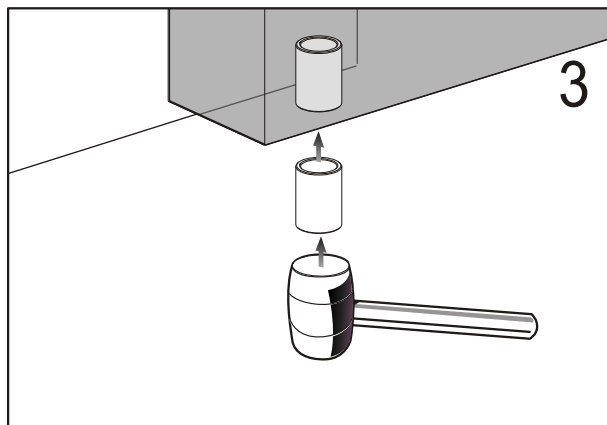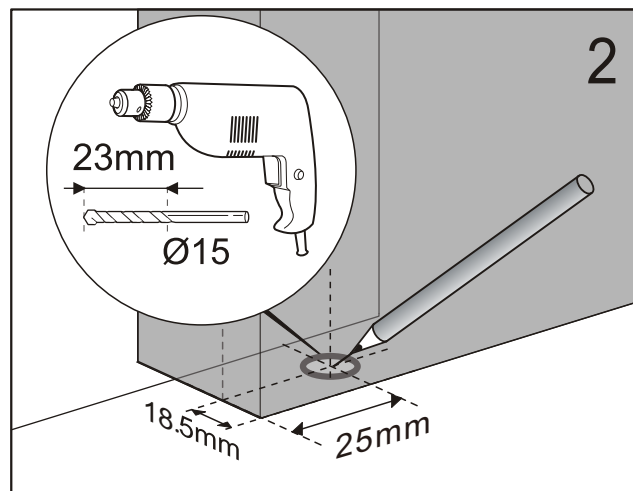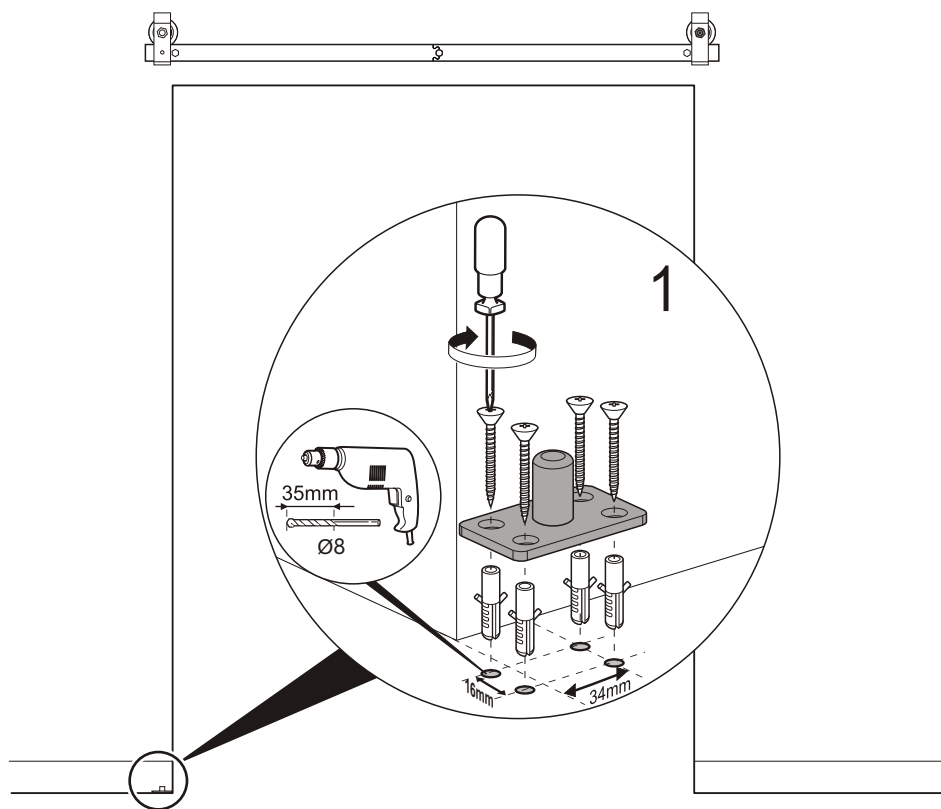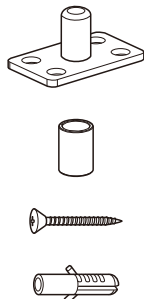

Installation

8



 
 
 
 
 
C

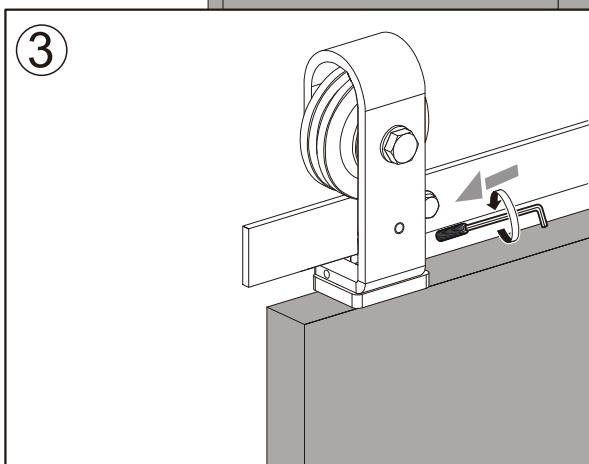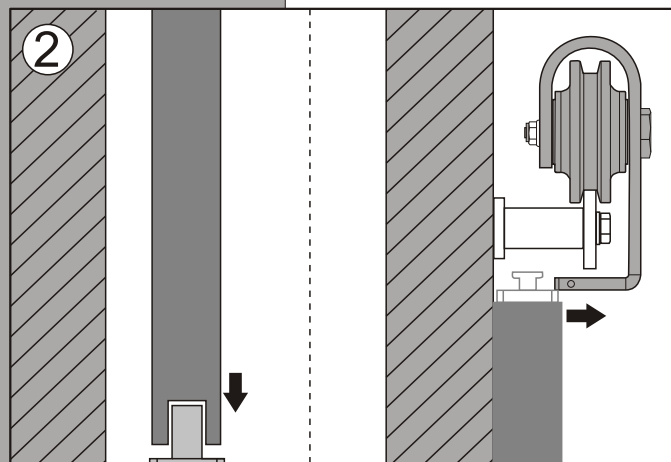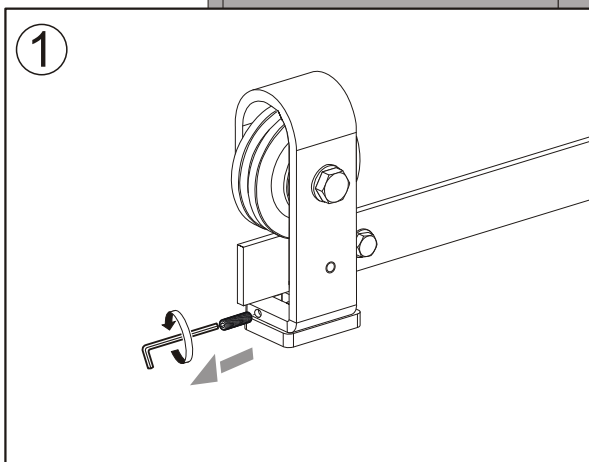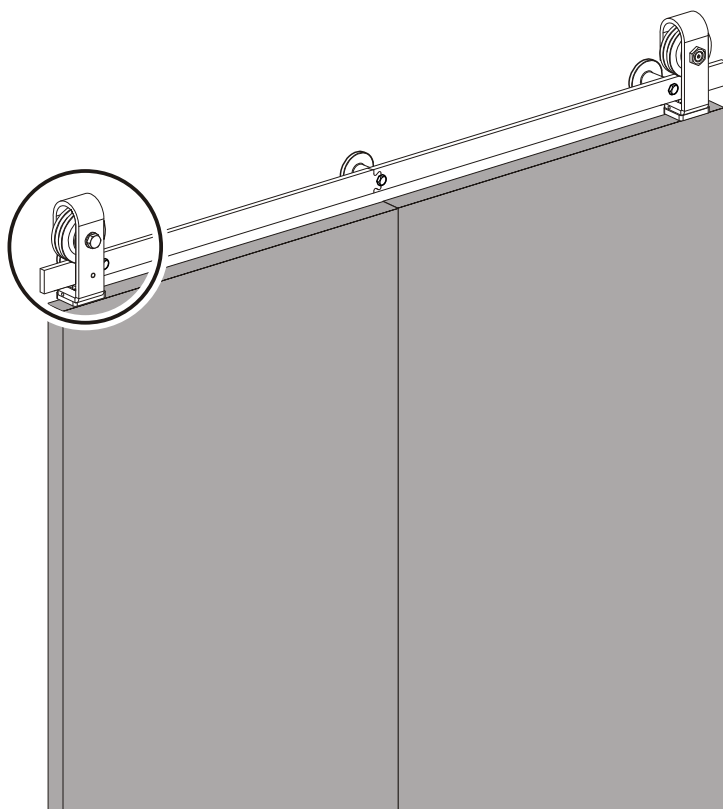

Installation

9

       
B

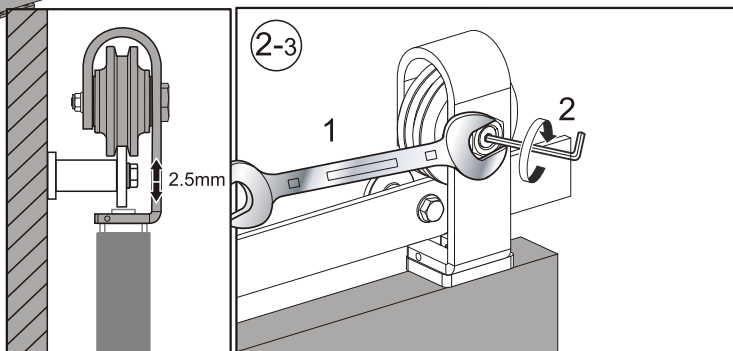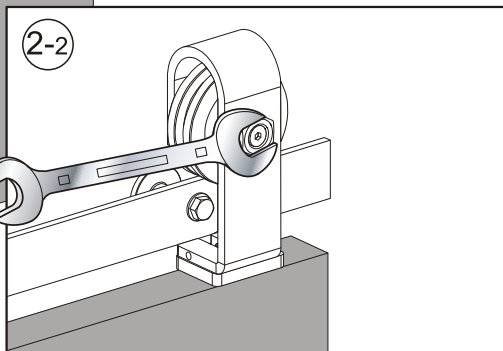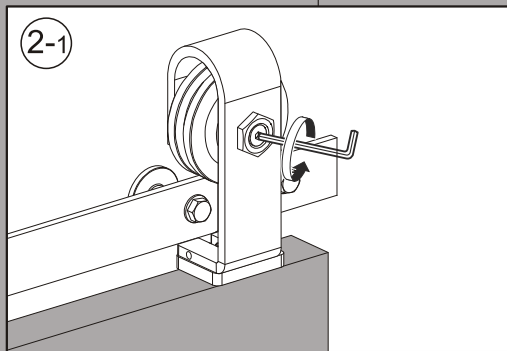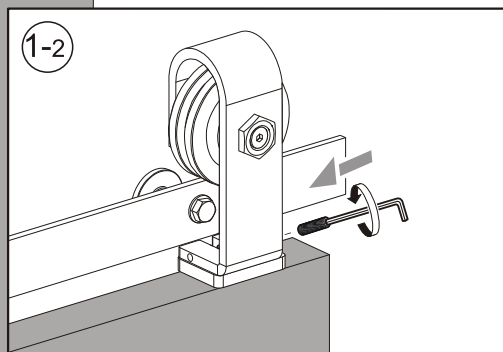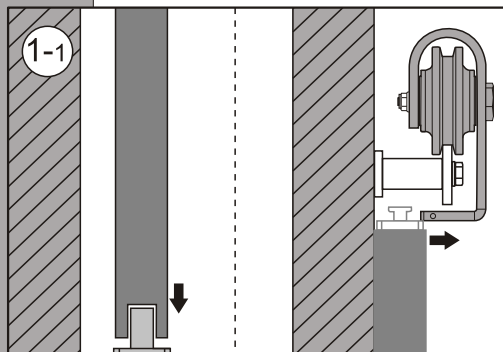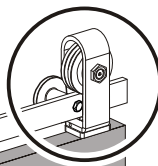

Installation

10

 C



D

