




Installation Manual for a 45cm door leaf

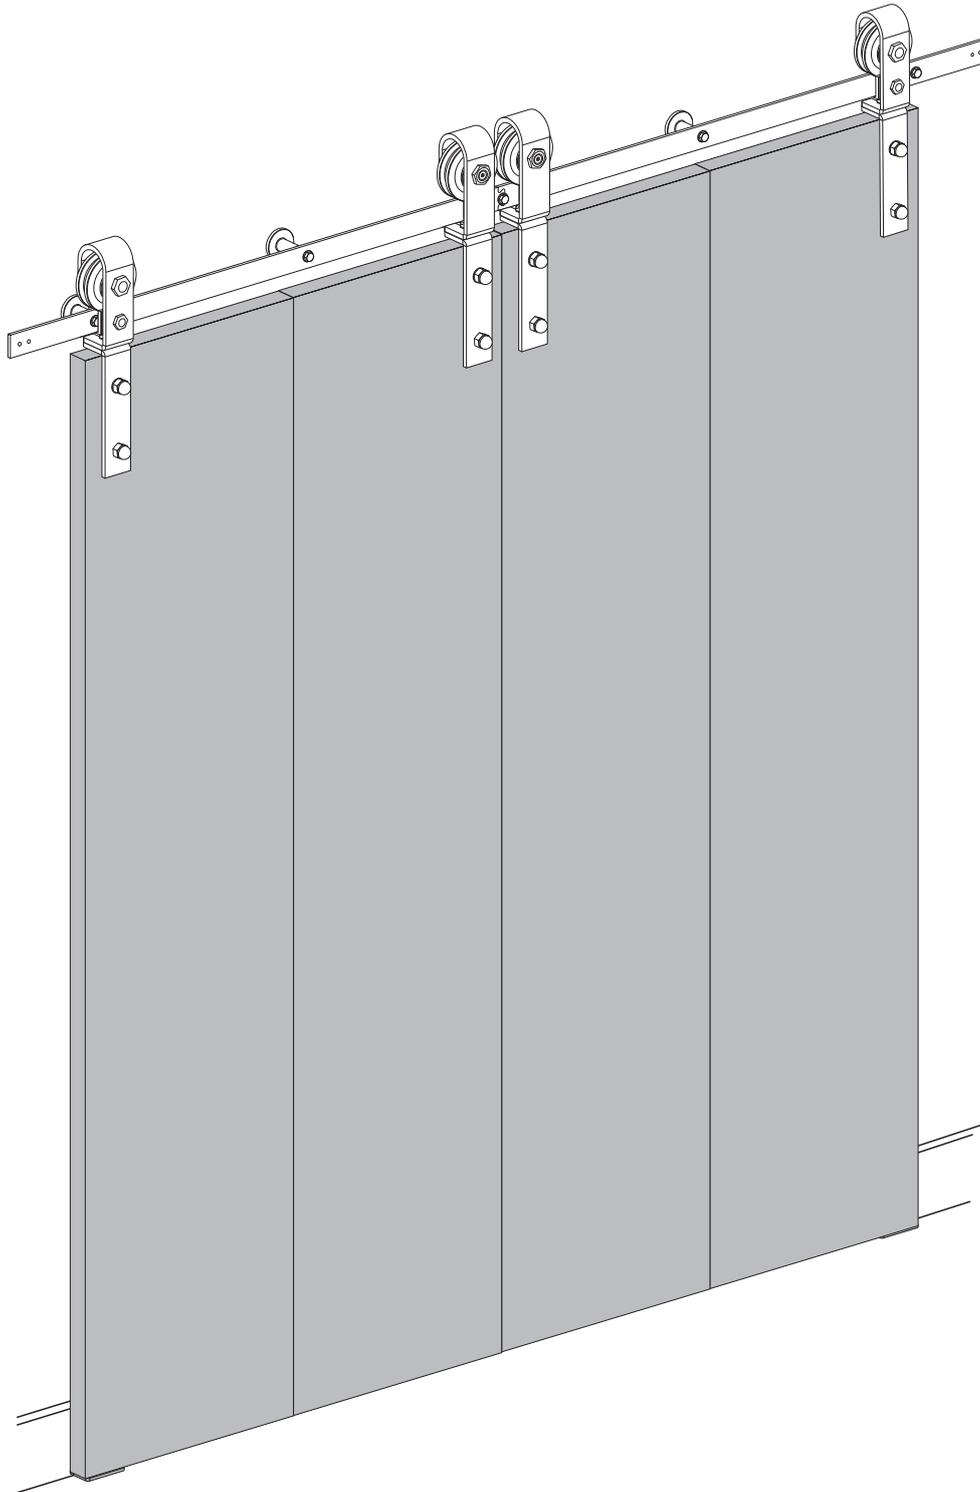



Components list

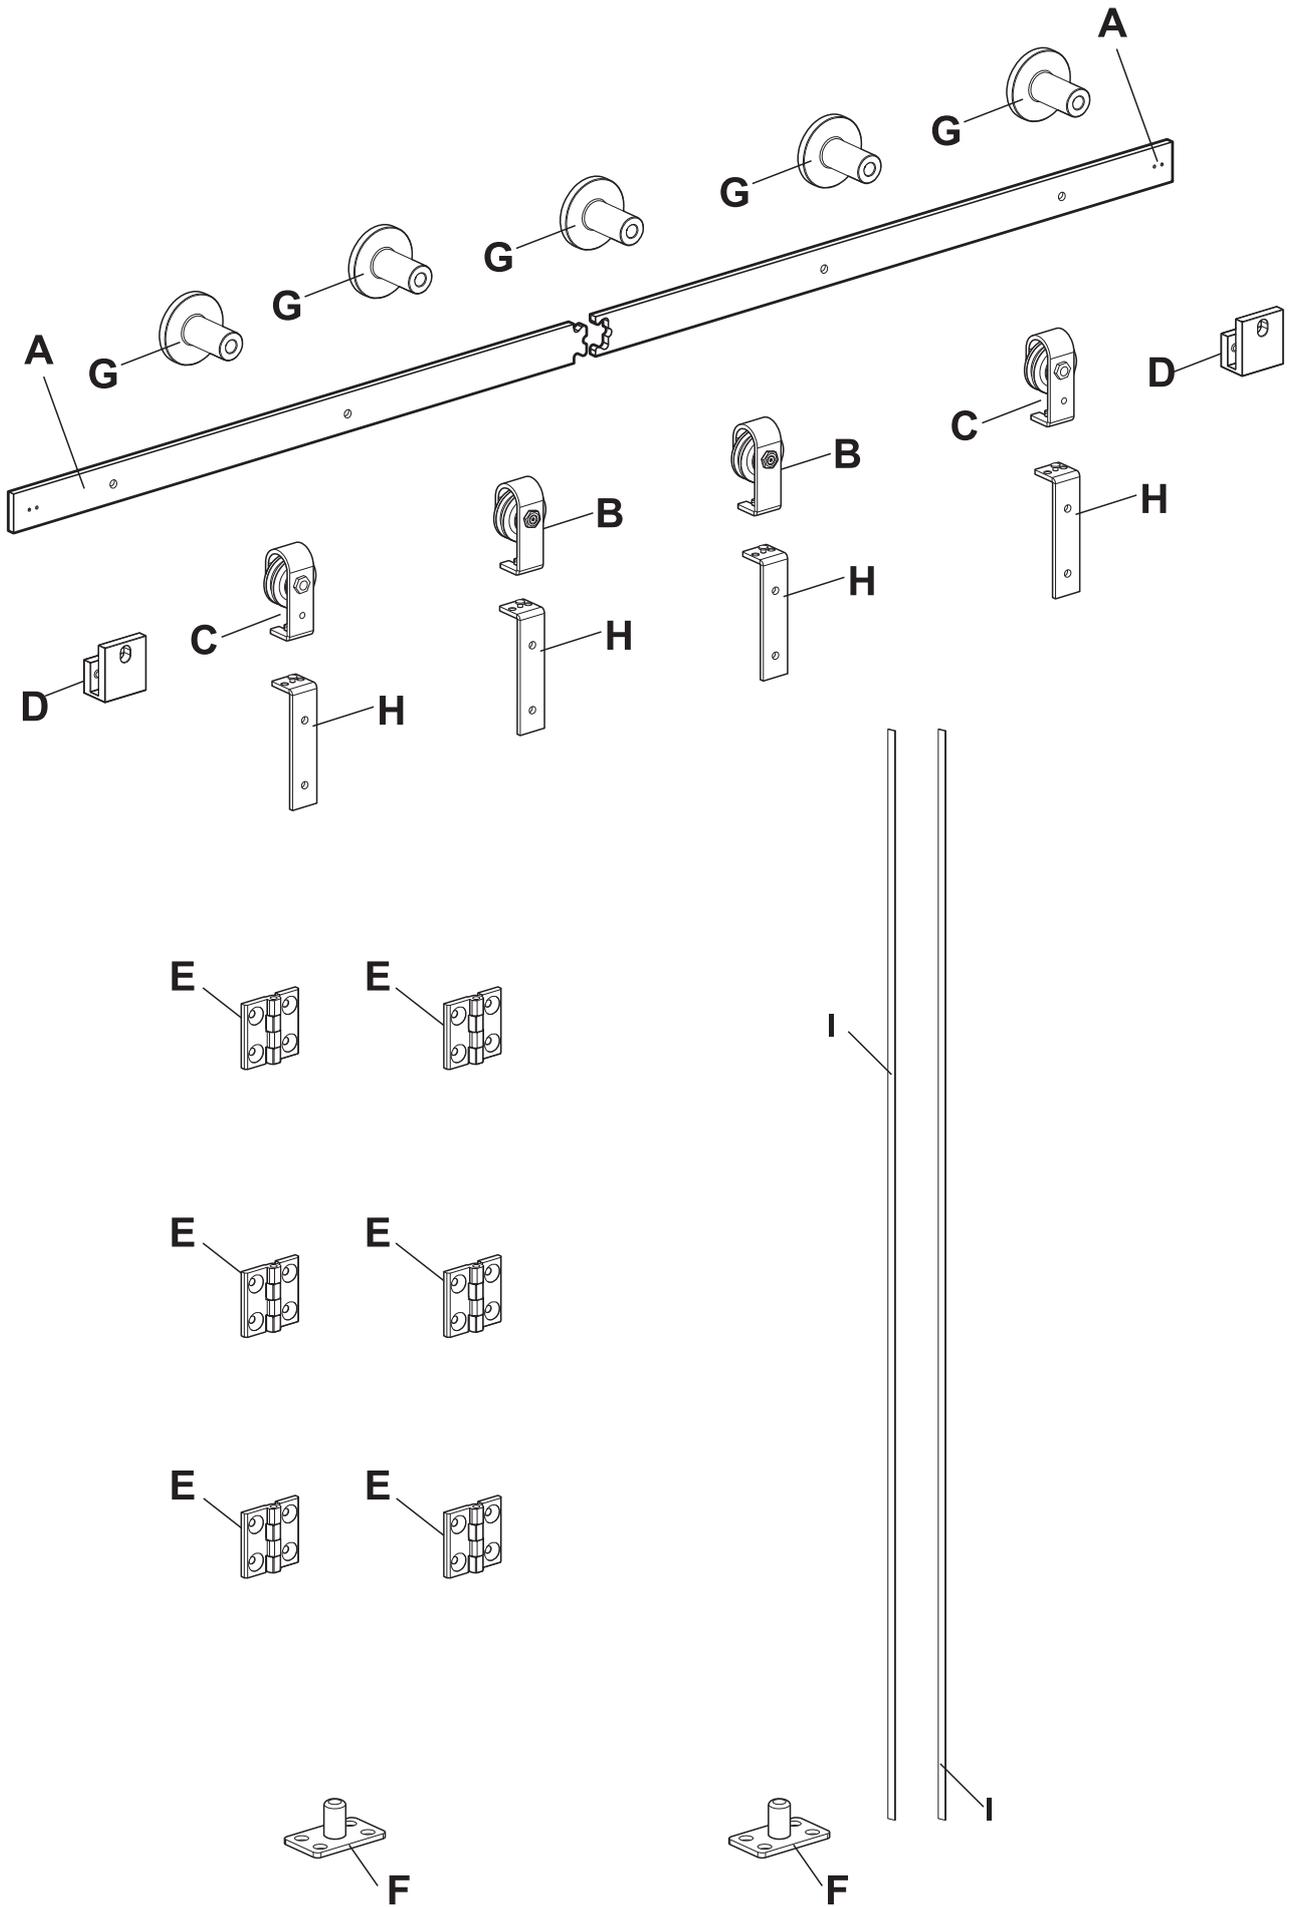



Section drawing

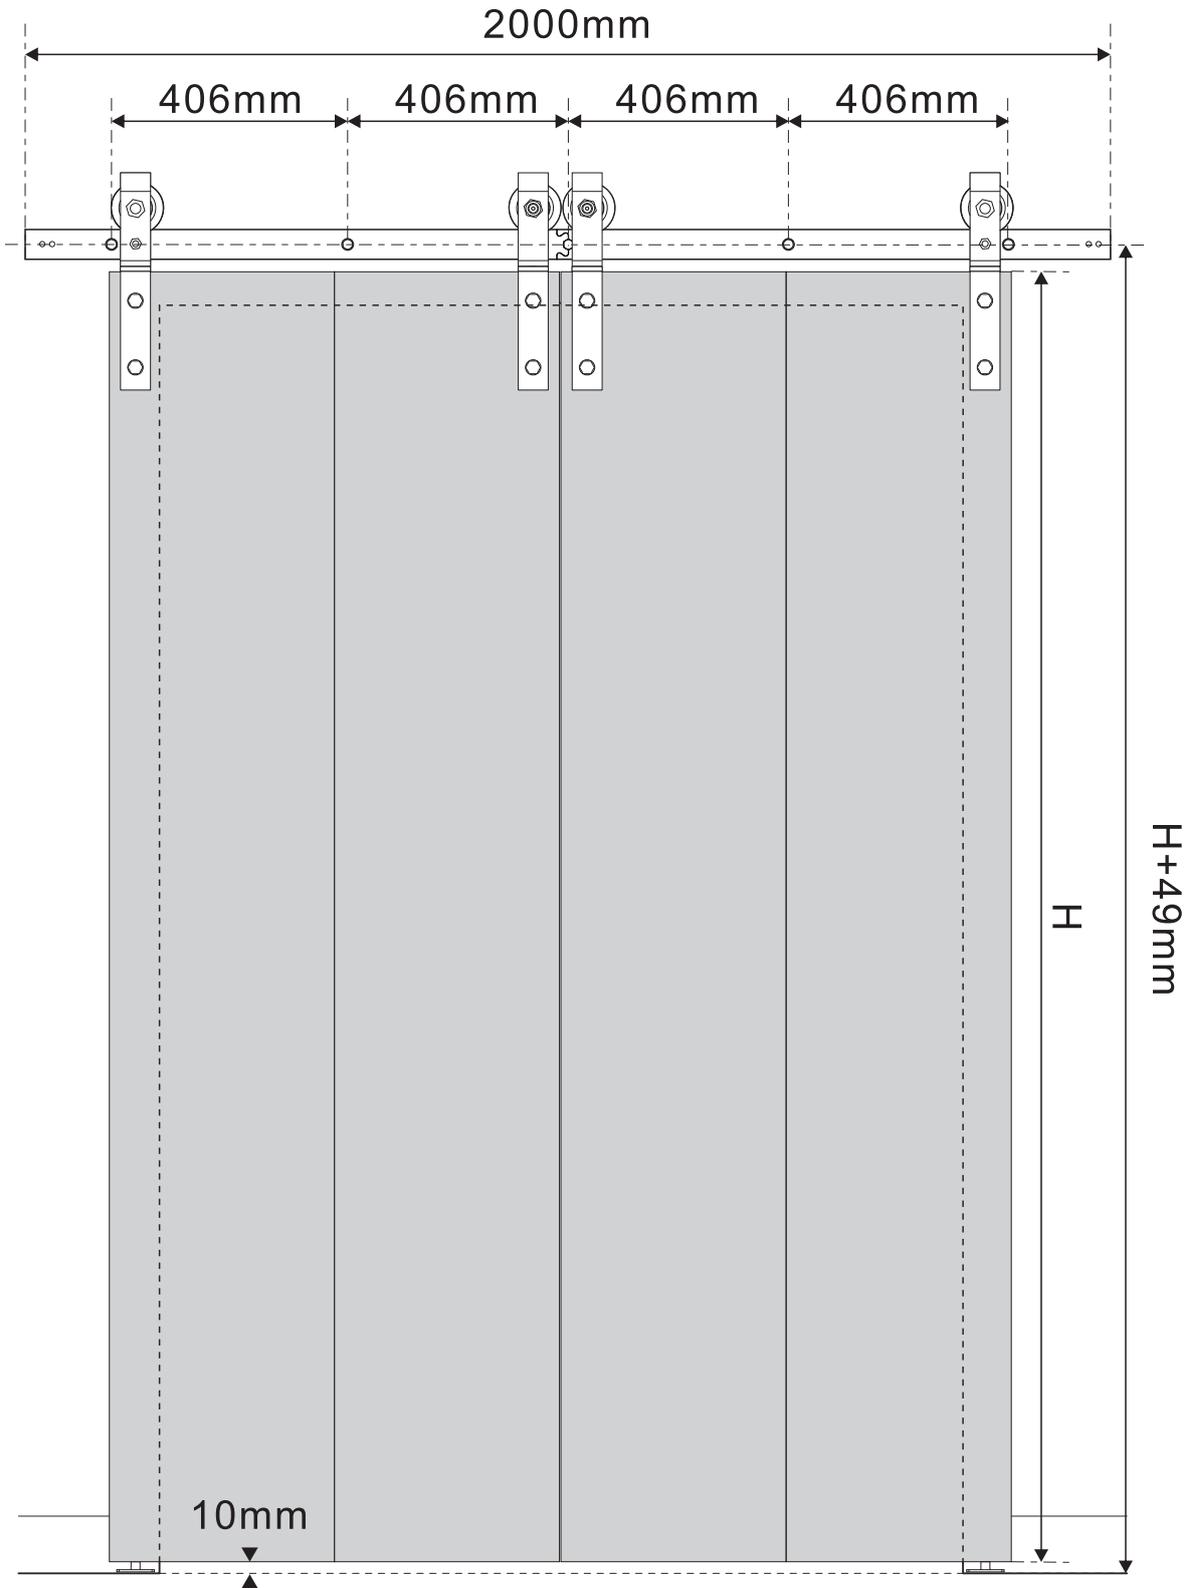



Installation

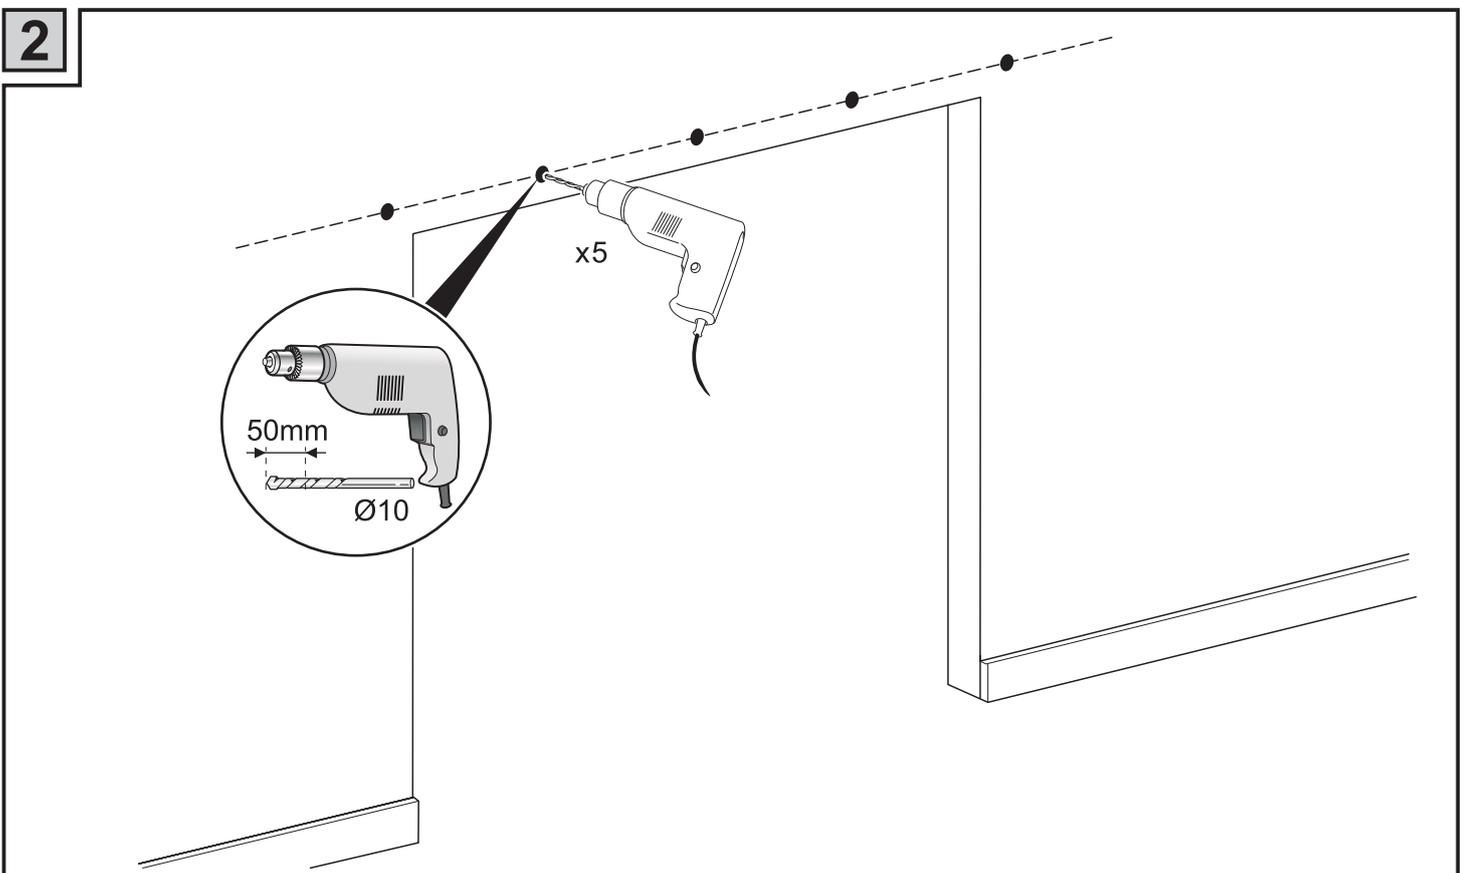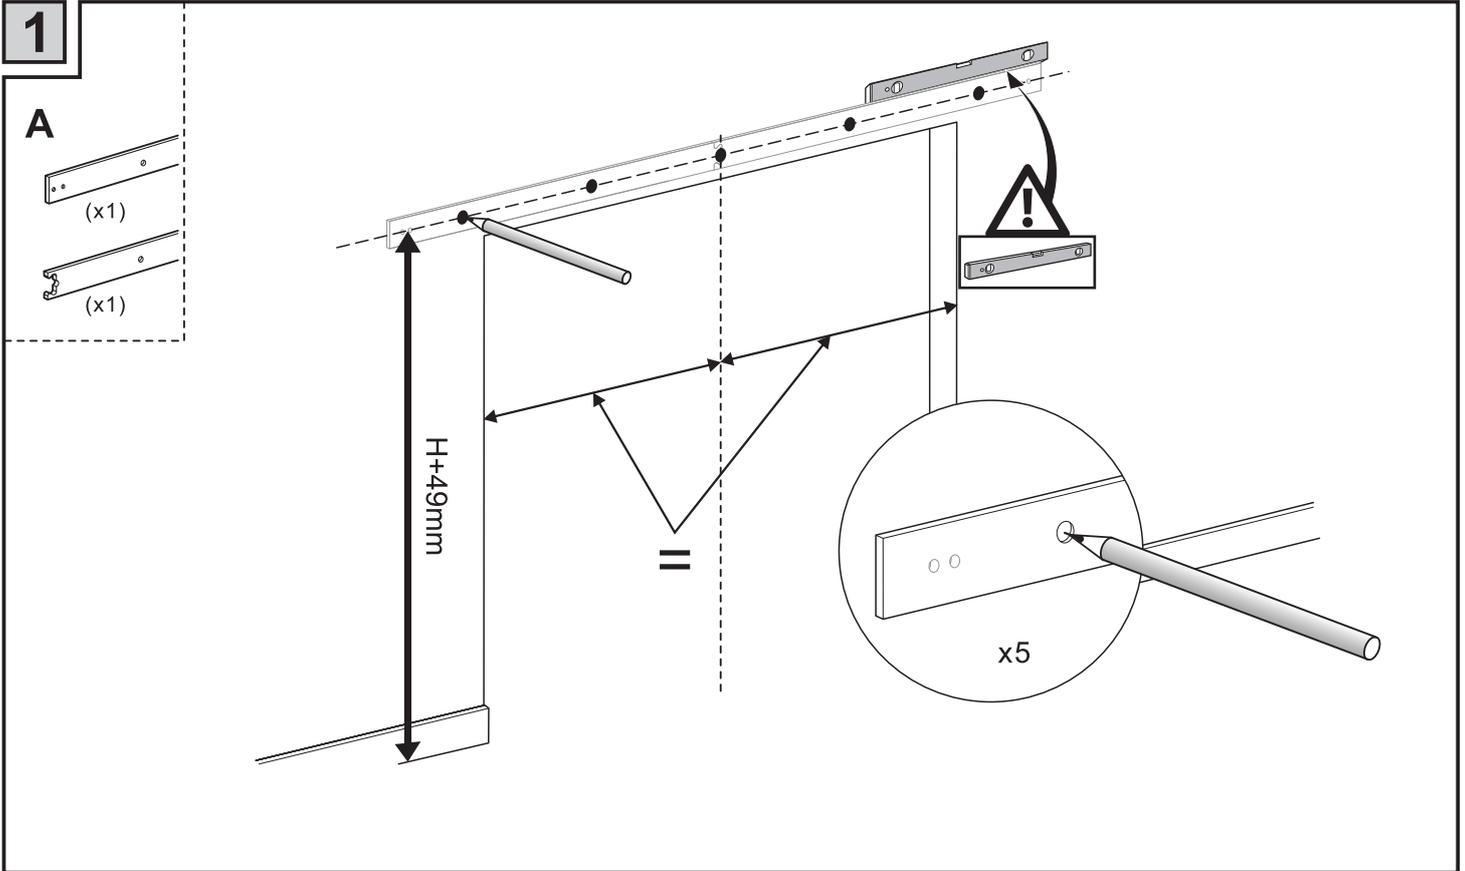


Installation

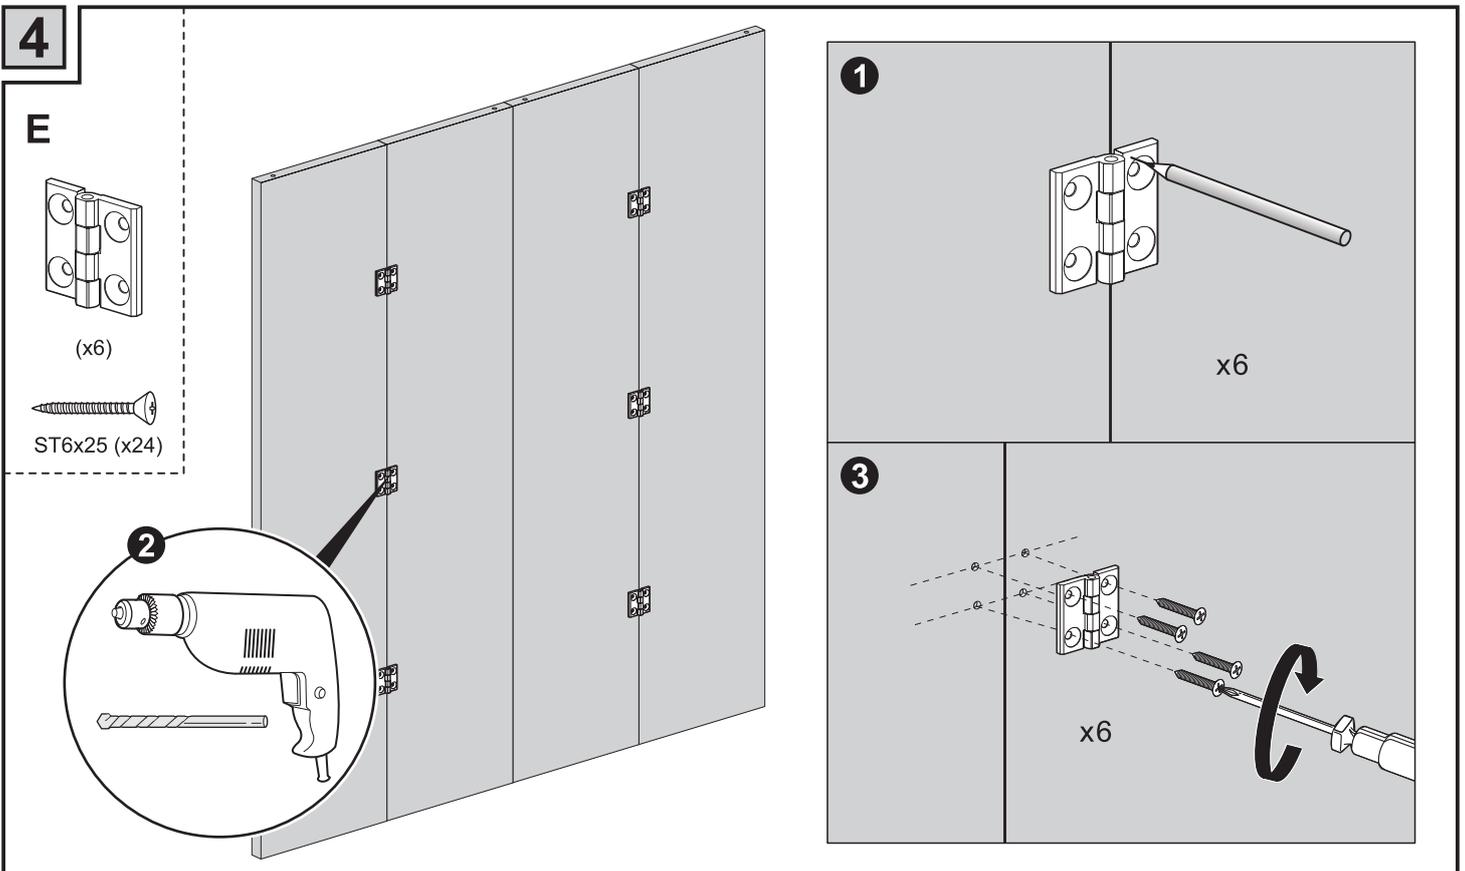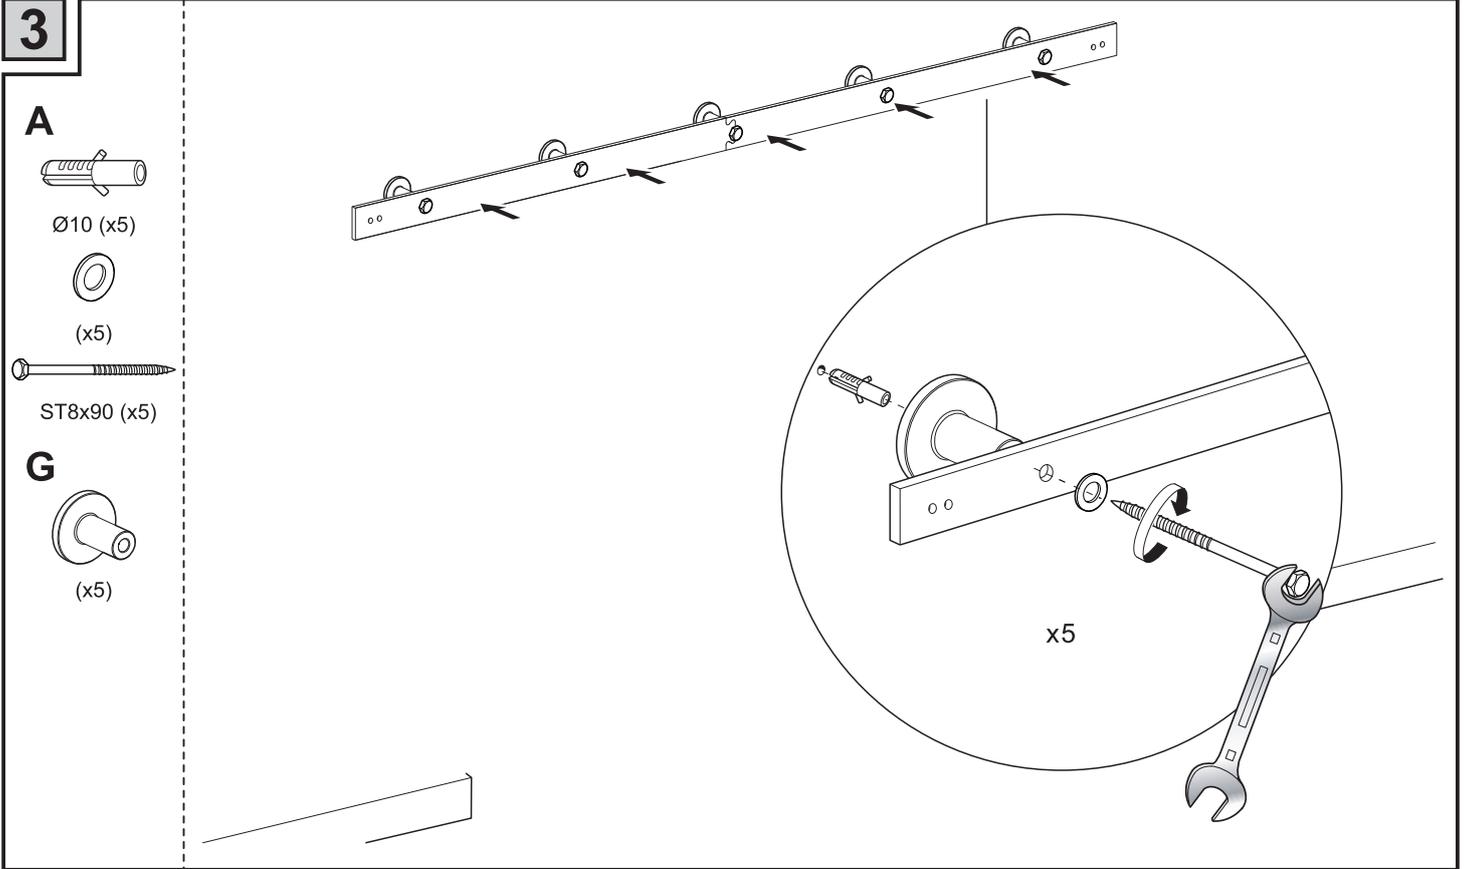


Installation

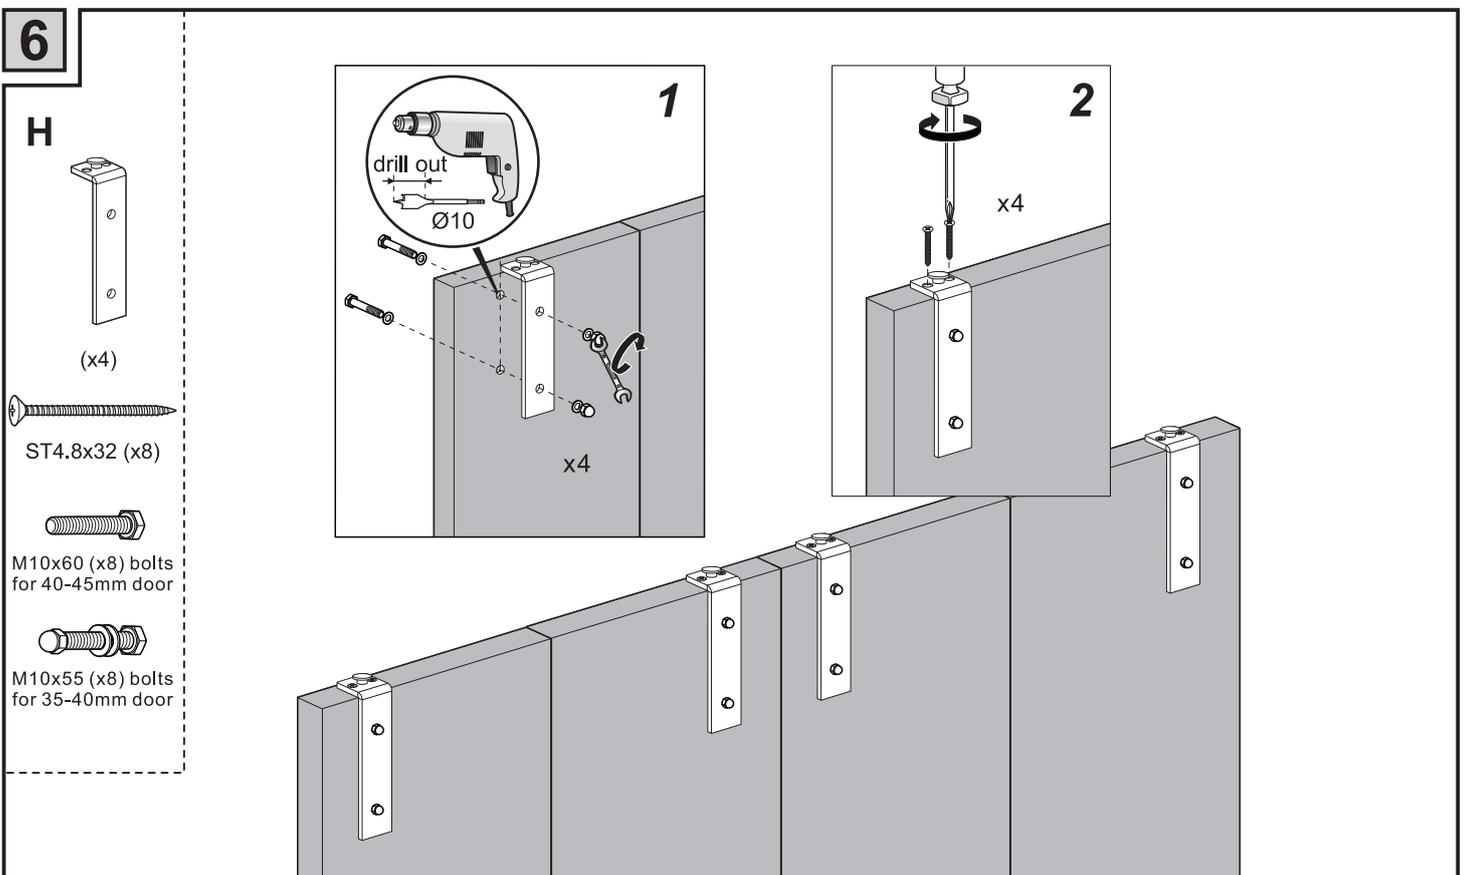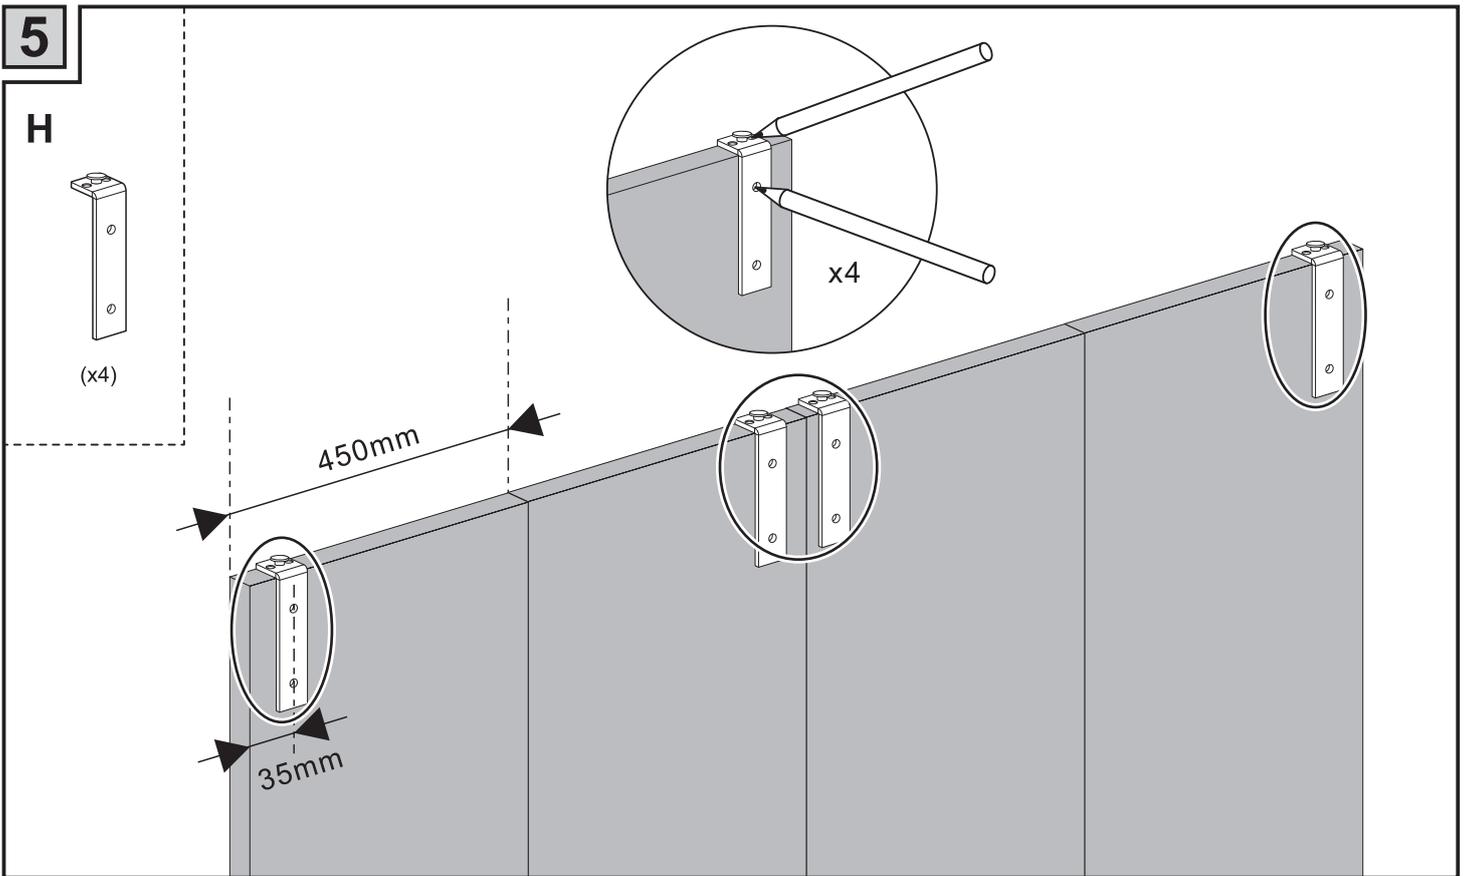

Installation

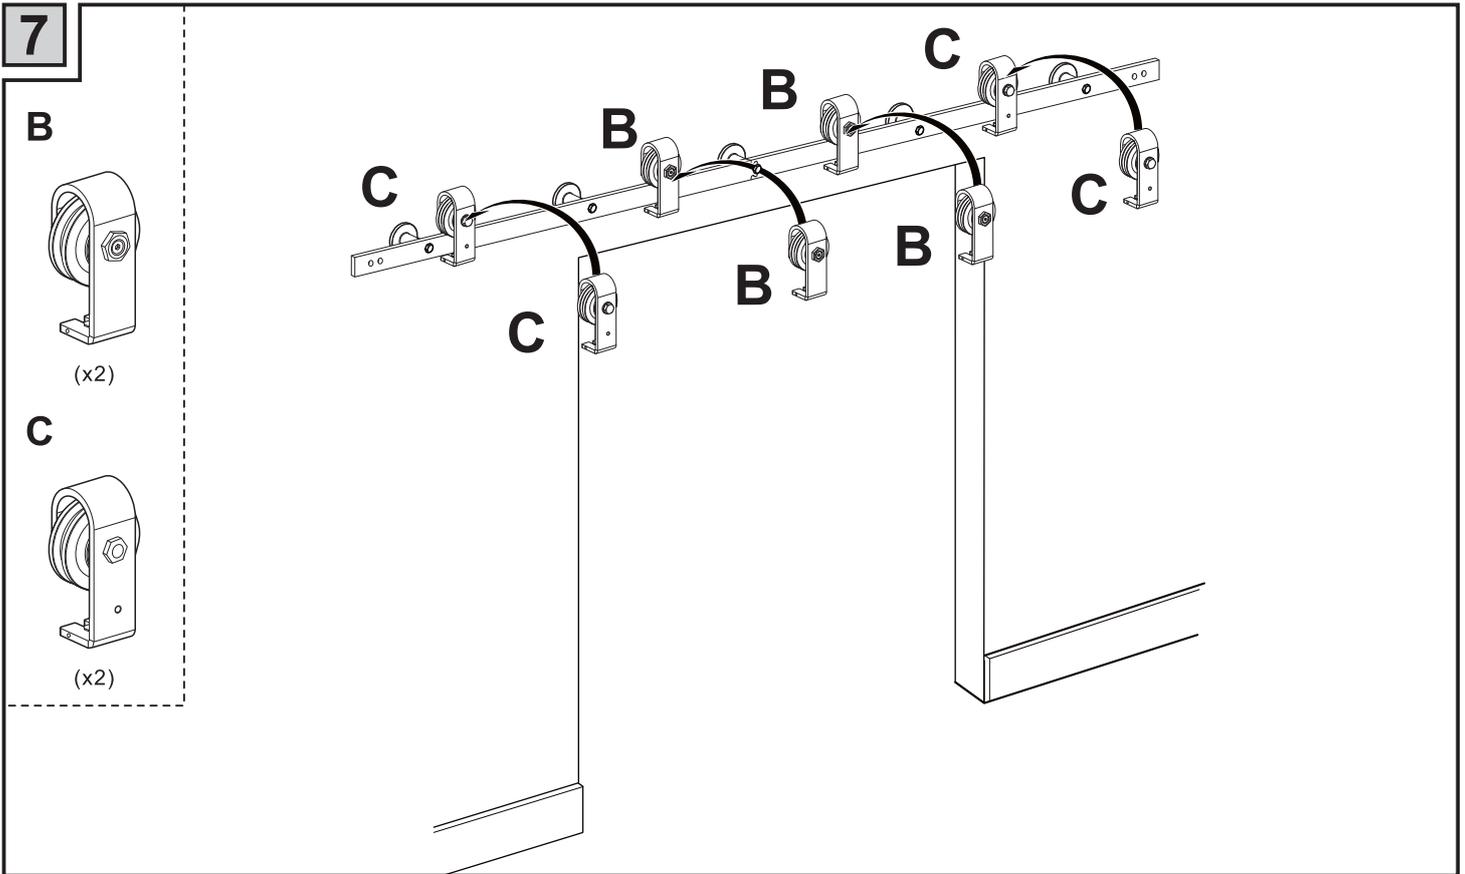

Installation of wooden door stopper

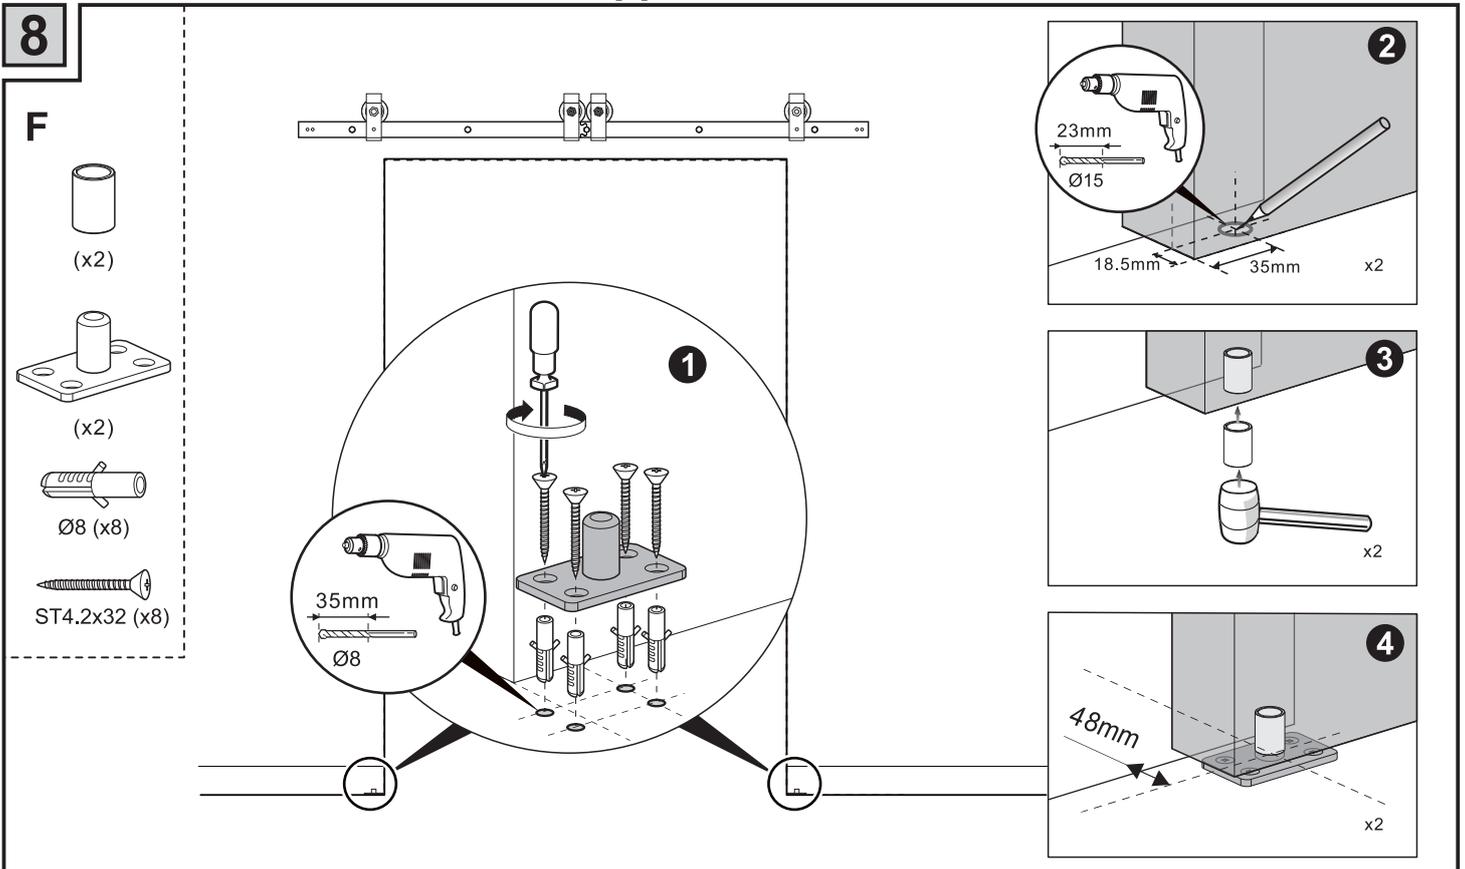

Installation


Installation of iron frame door stopper

8

F



(x2)

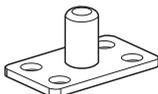




(x2)




Ø8 (x8)




ST4.2x32 (x8)

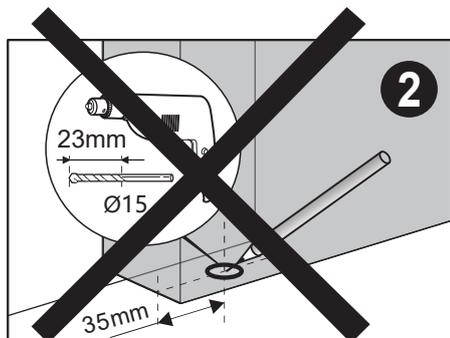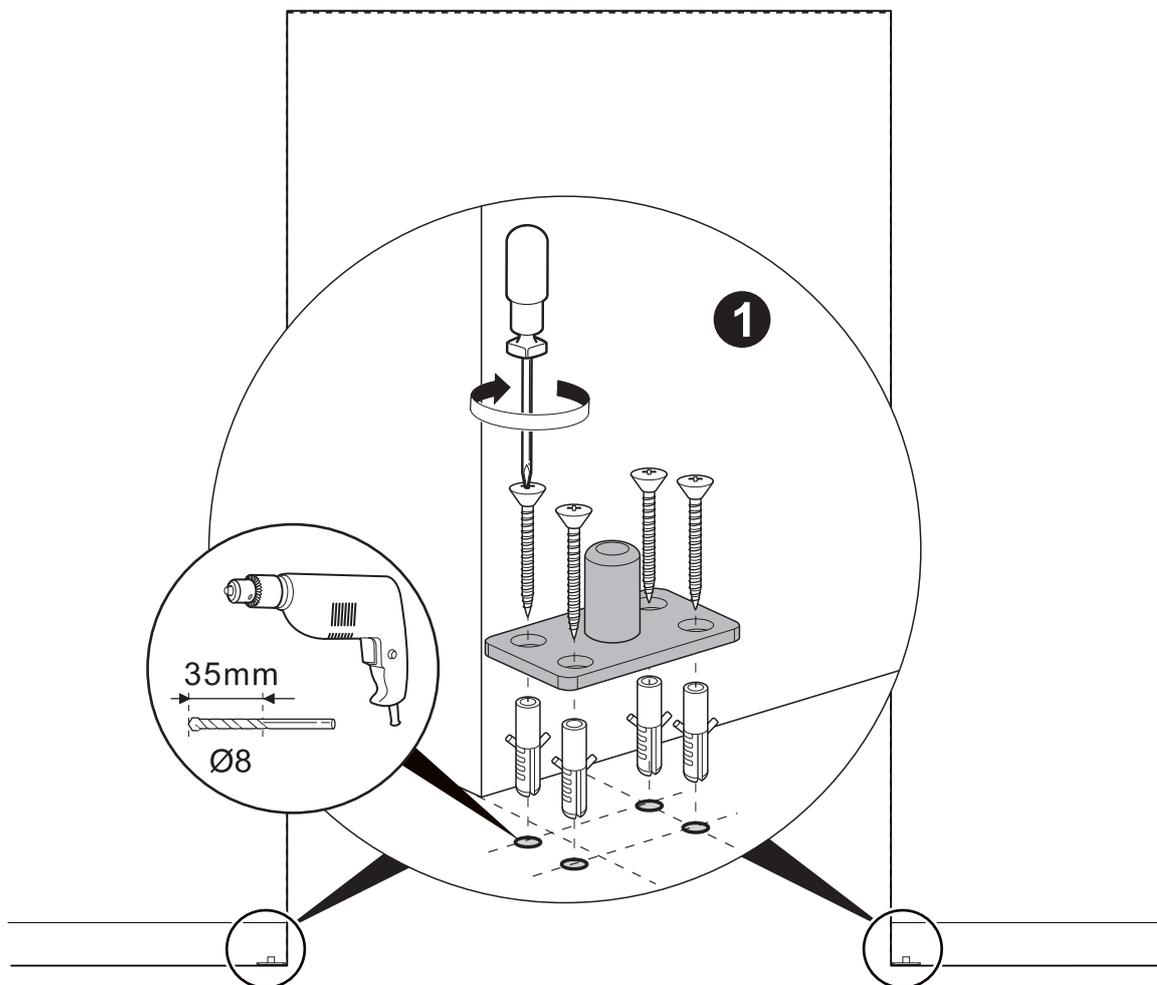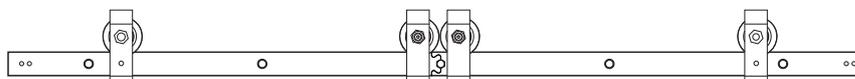

2

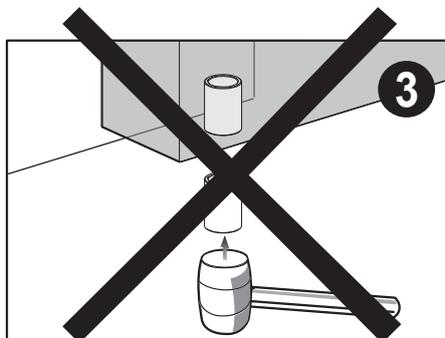

3

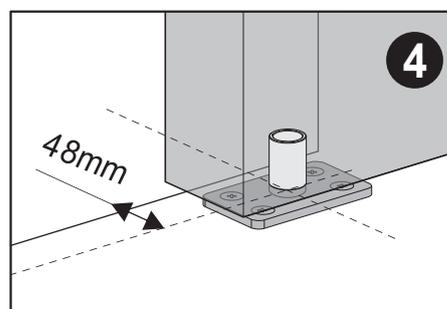





4

The hole positions at the bottom of the iron frame door need to be factory-configured

Iron frame doors don't require sleeves


Installation

9

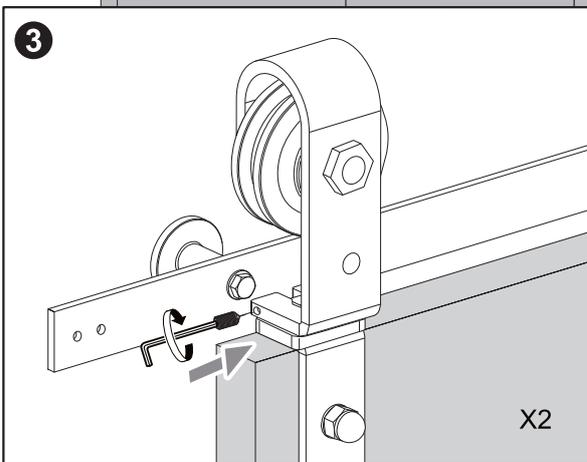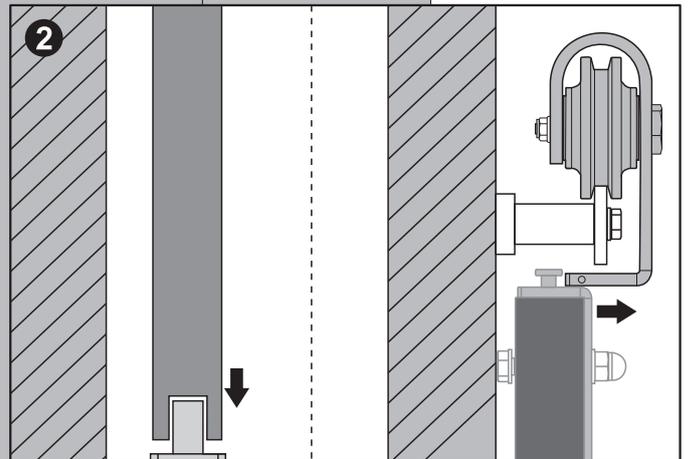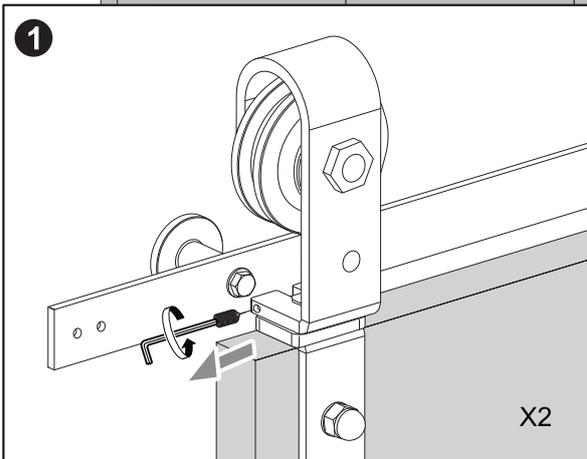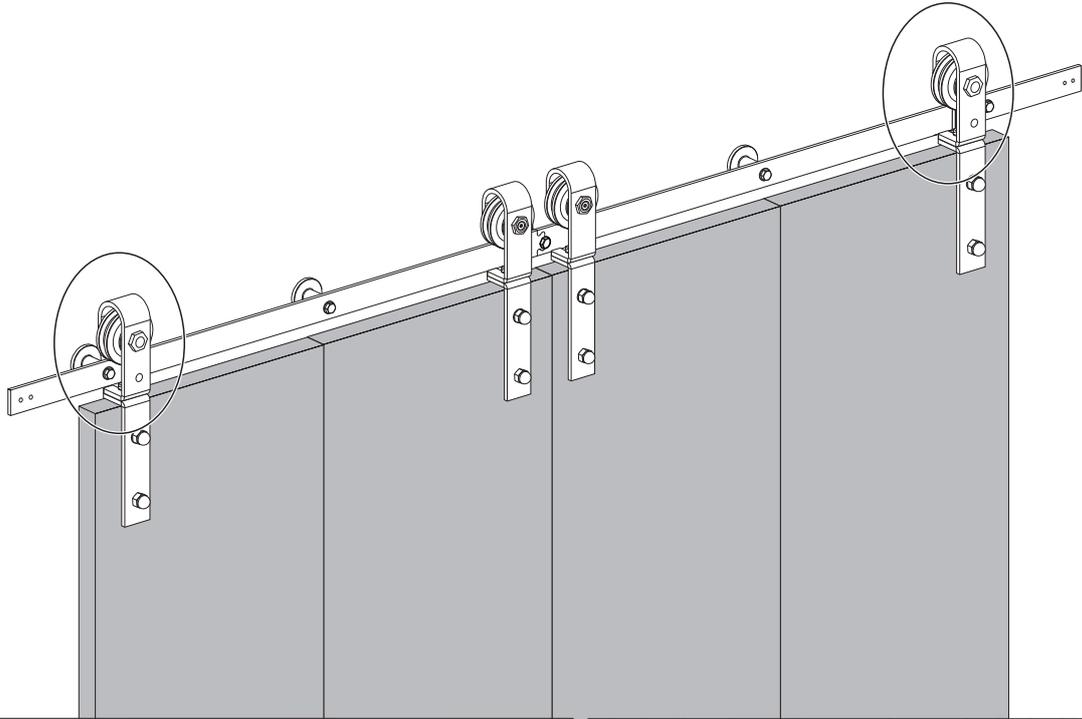

Installation

10

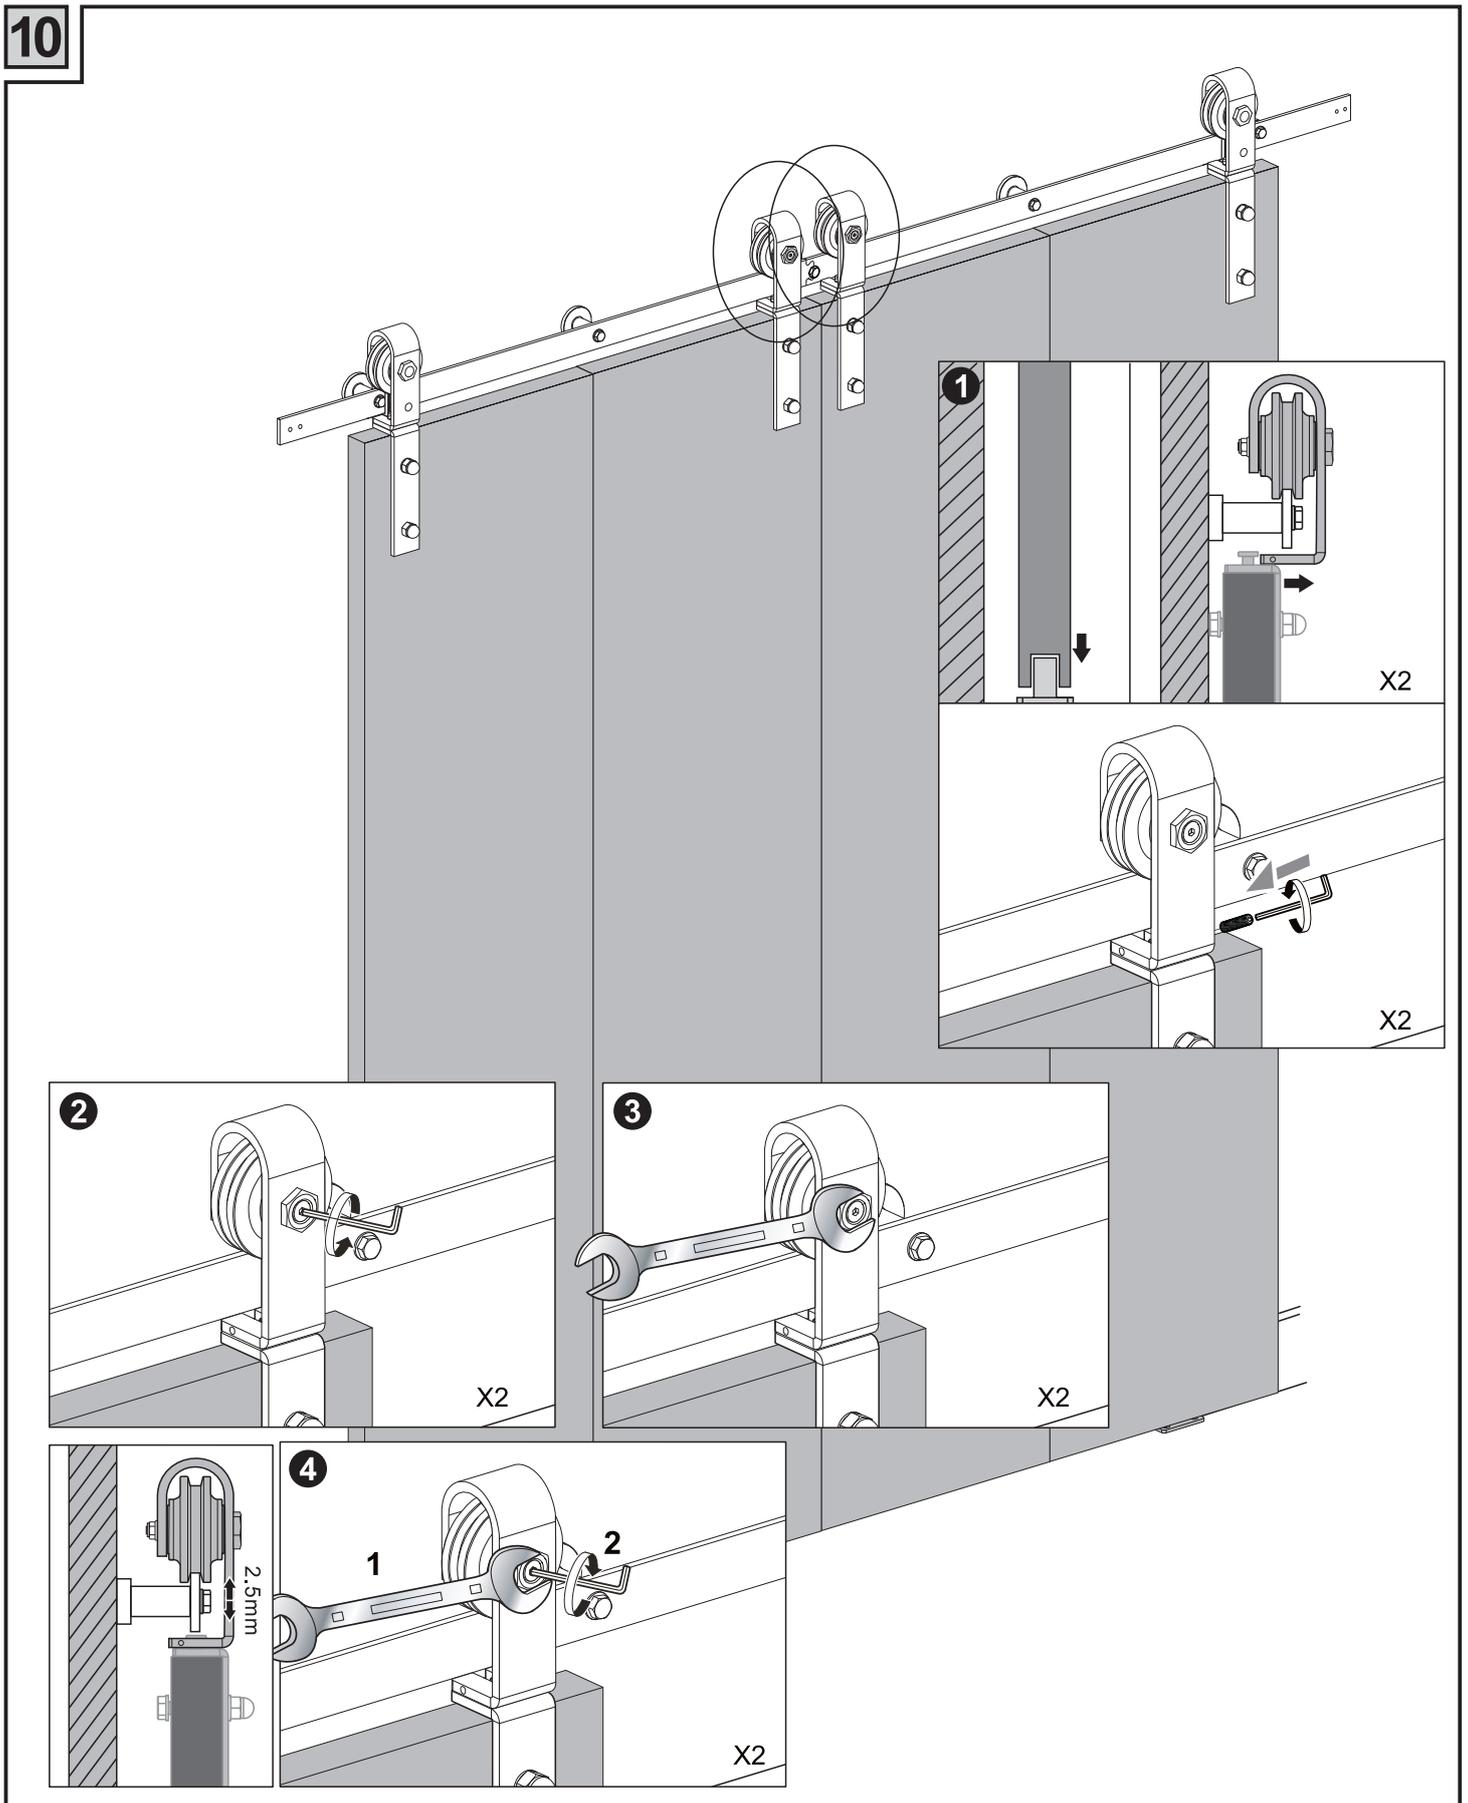

Installation

11

C




M5x26 (x2)



(x2)






D

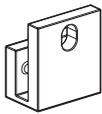

(x2)



M5x6 (x4)

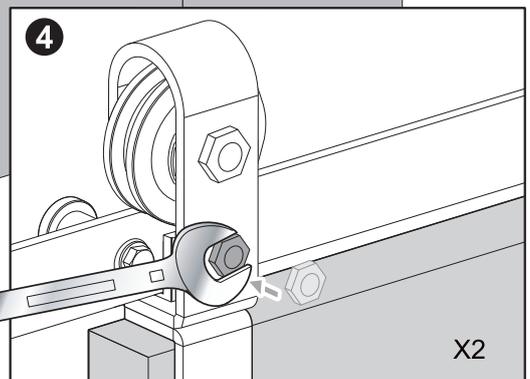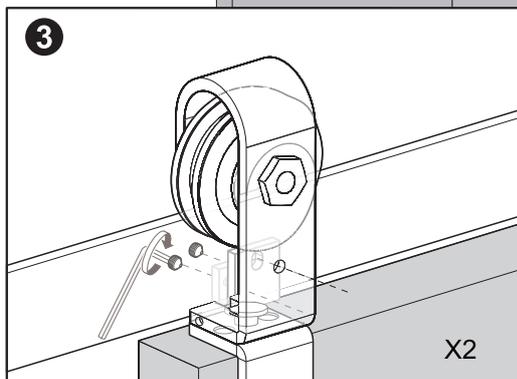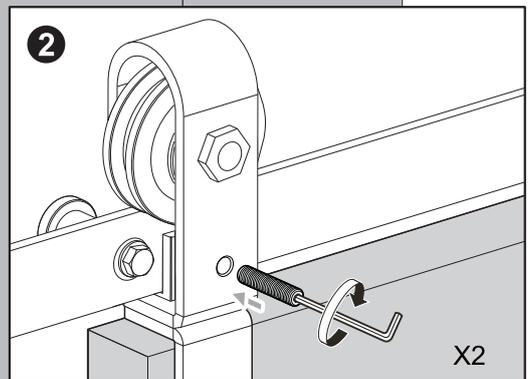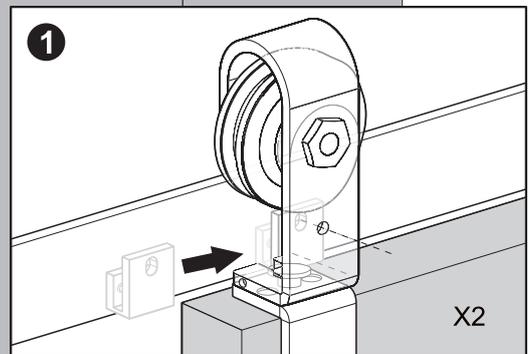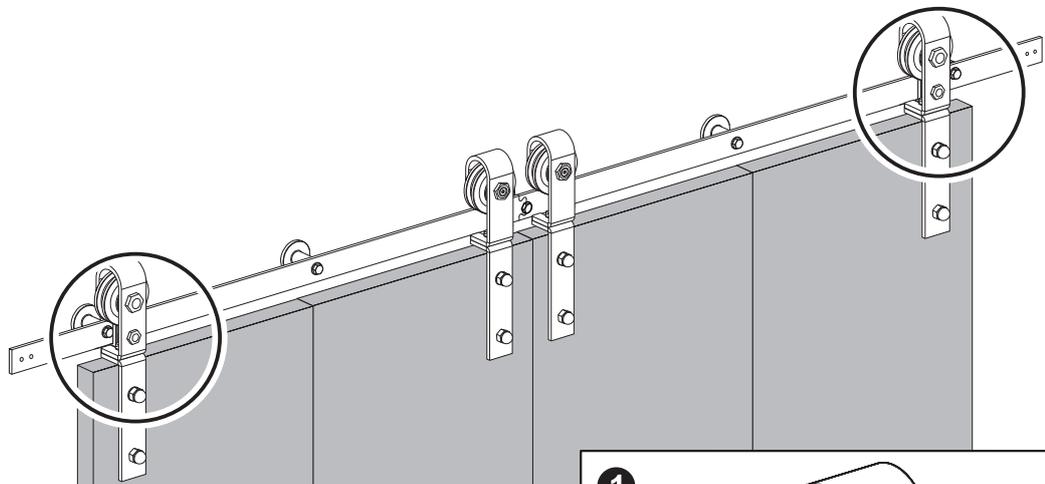


Installation

12

I



(x2)

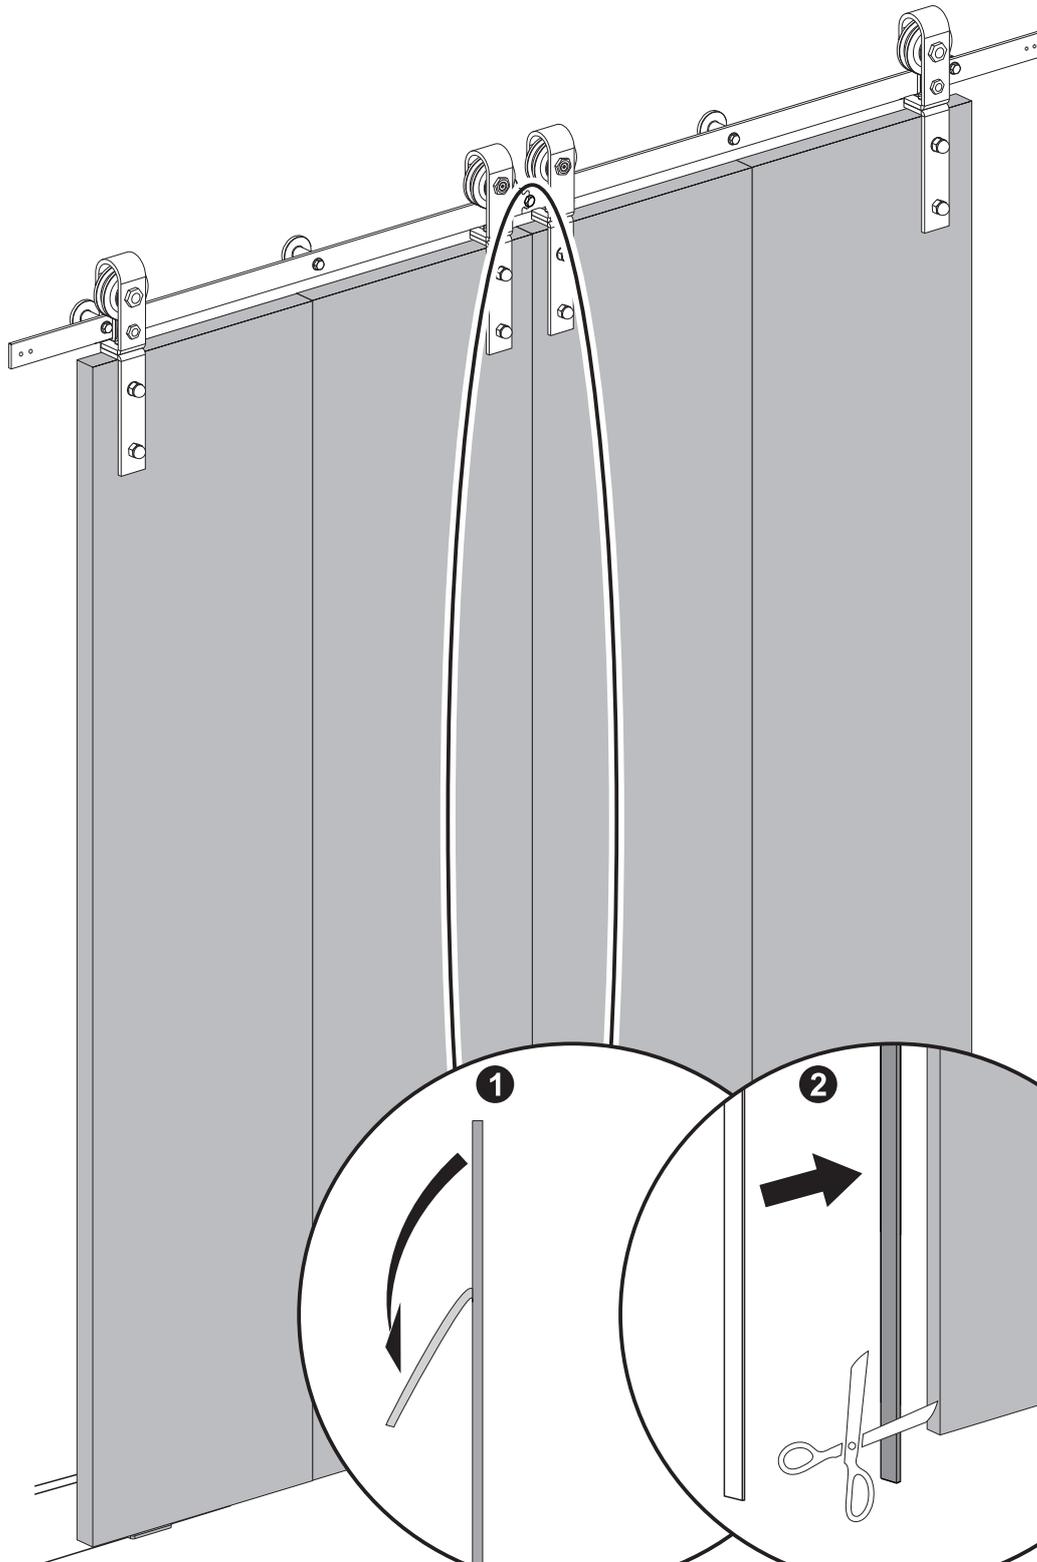

Stick the anti-collision strip onto the door frame