



Installation Manual for a 50cm door leaf

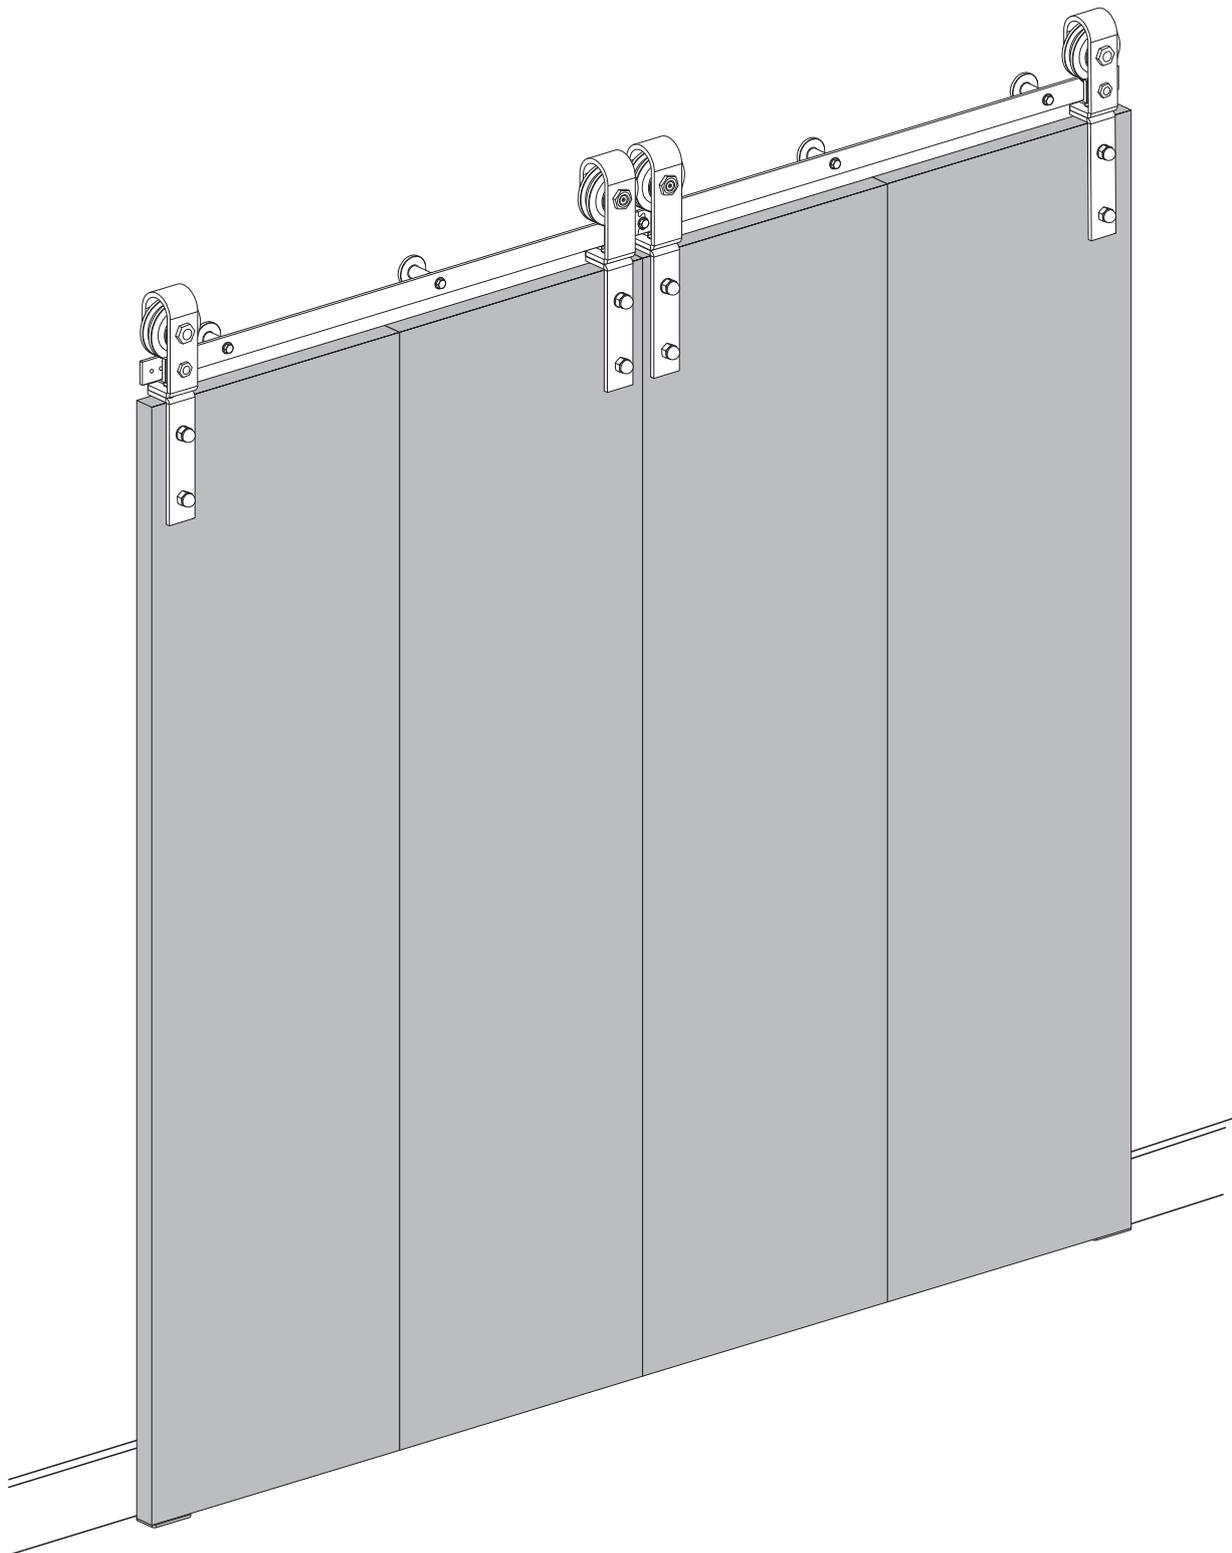


Components list

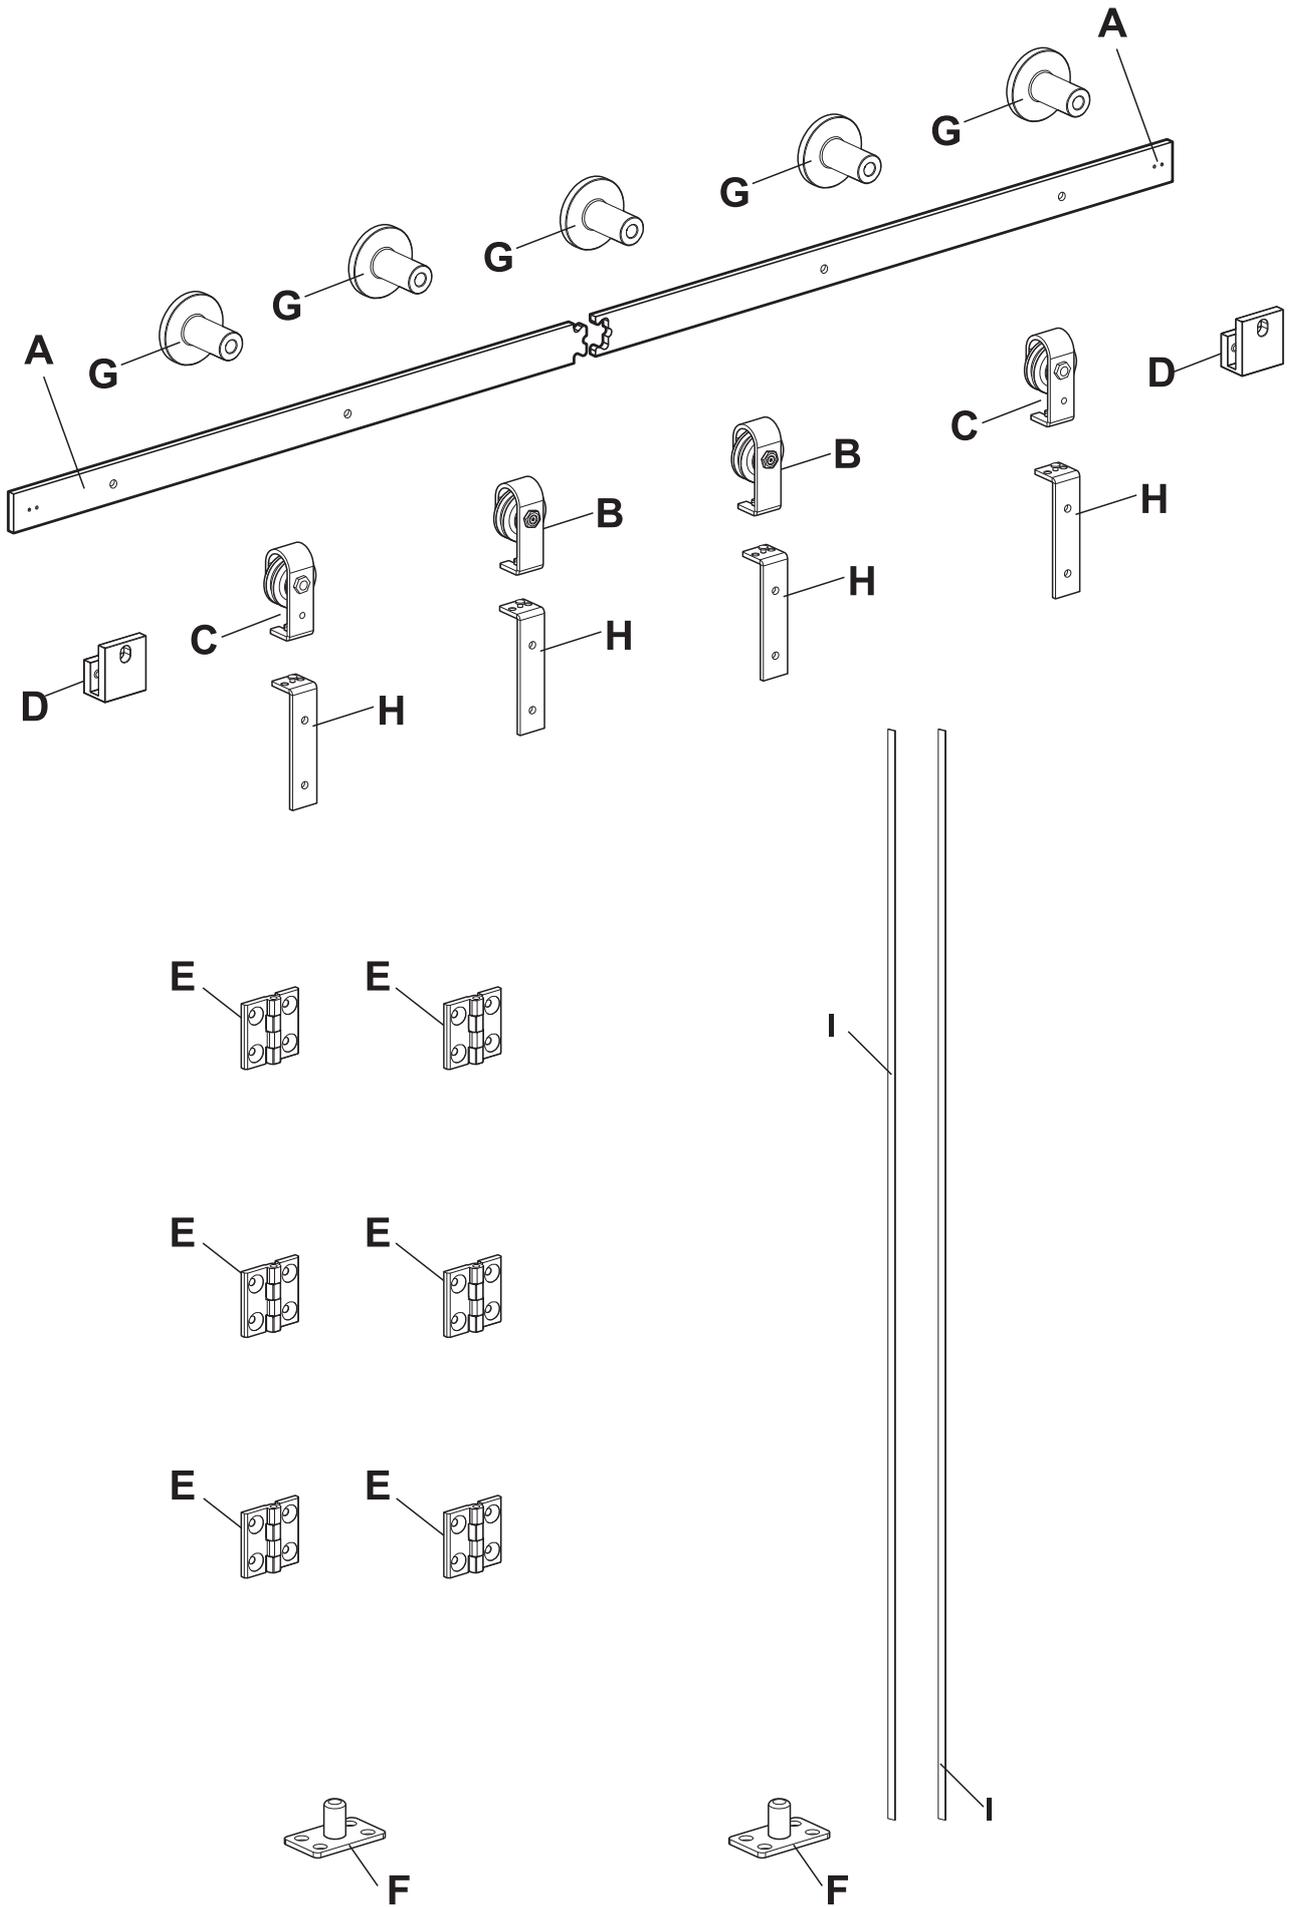

Pre-installation


TOOLS REQUIRED

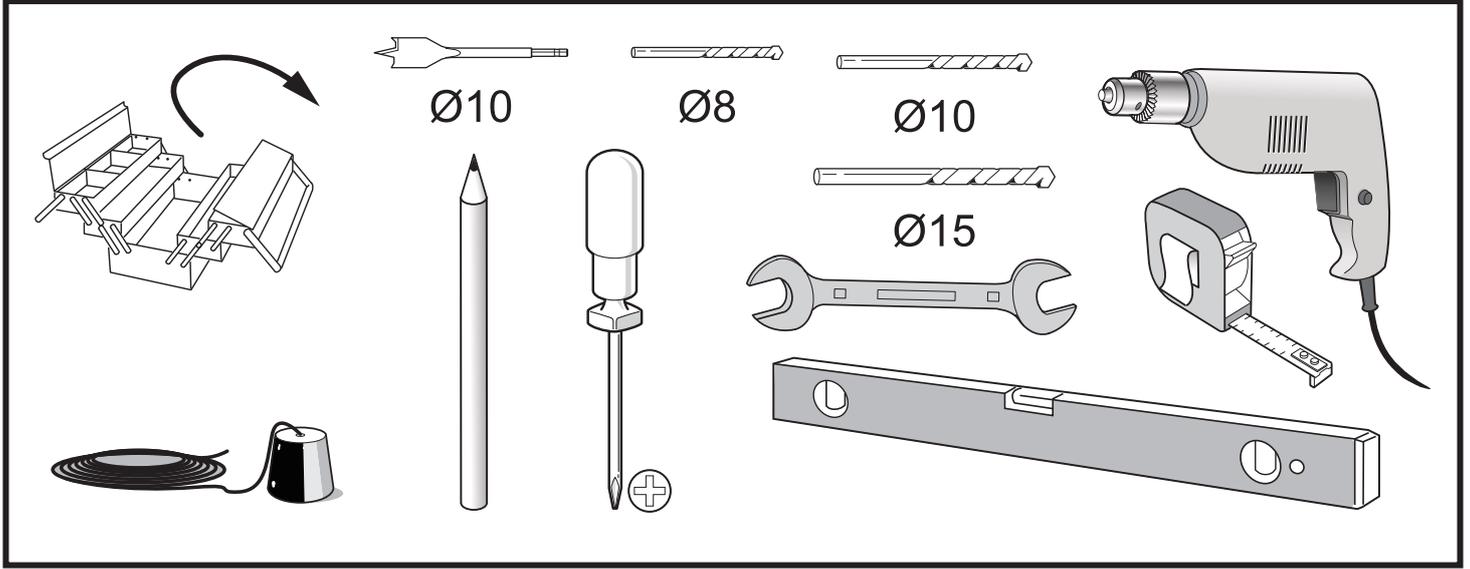



HARDWARE INCLUDED

<p>A</p> <p>Ø10 (x5) (x5) ST8x90 (x5)</p> <p>(x1) (x1)</p>	<p>B</p> <p>(x2)</p>	<p>C</p> <p>(x2) M5x26 (x2) (x2)</p>
<p>D</p> <p>(x2) M5x6 (x4)</p>	<p>E</p> <p>(x6) ST6x25 (x24)</p>	<p>F</p> <p>(x2) (x2) Ø8 (x8) ST4.2x32 (x8)</p>
<p>G</p> <p>(x5)</p>	<p>H</p> <p>M10x60 (x8) bolts for 40-45mm door M10x55 (x8) bolts for 35-40mm door (x4) ST4.8x32 (x8)</p>	
<p>I</p> <p>(x2)</p>	<p>(x1)</p>	



Section drawing

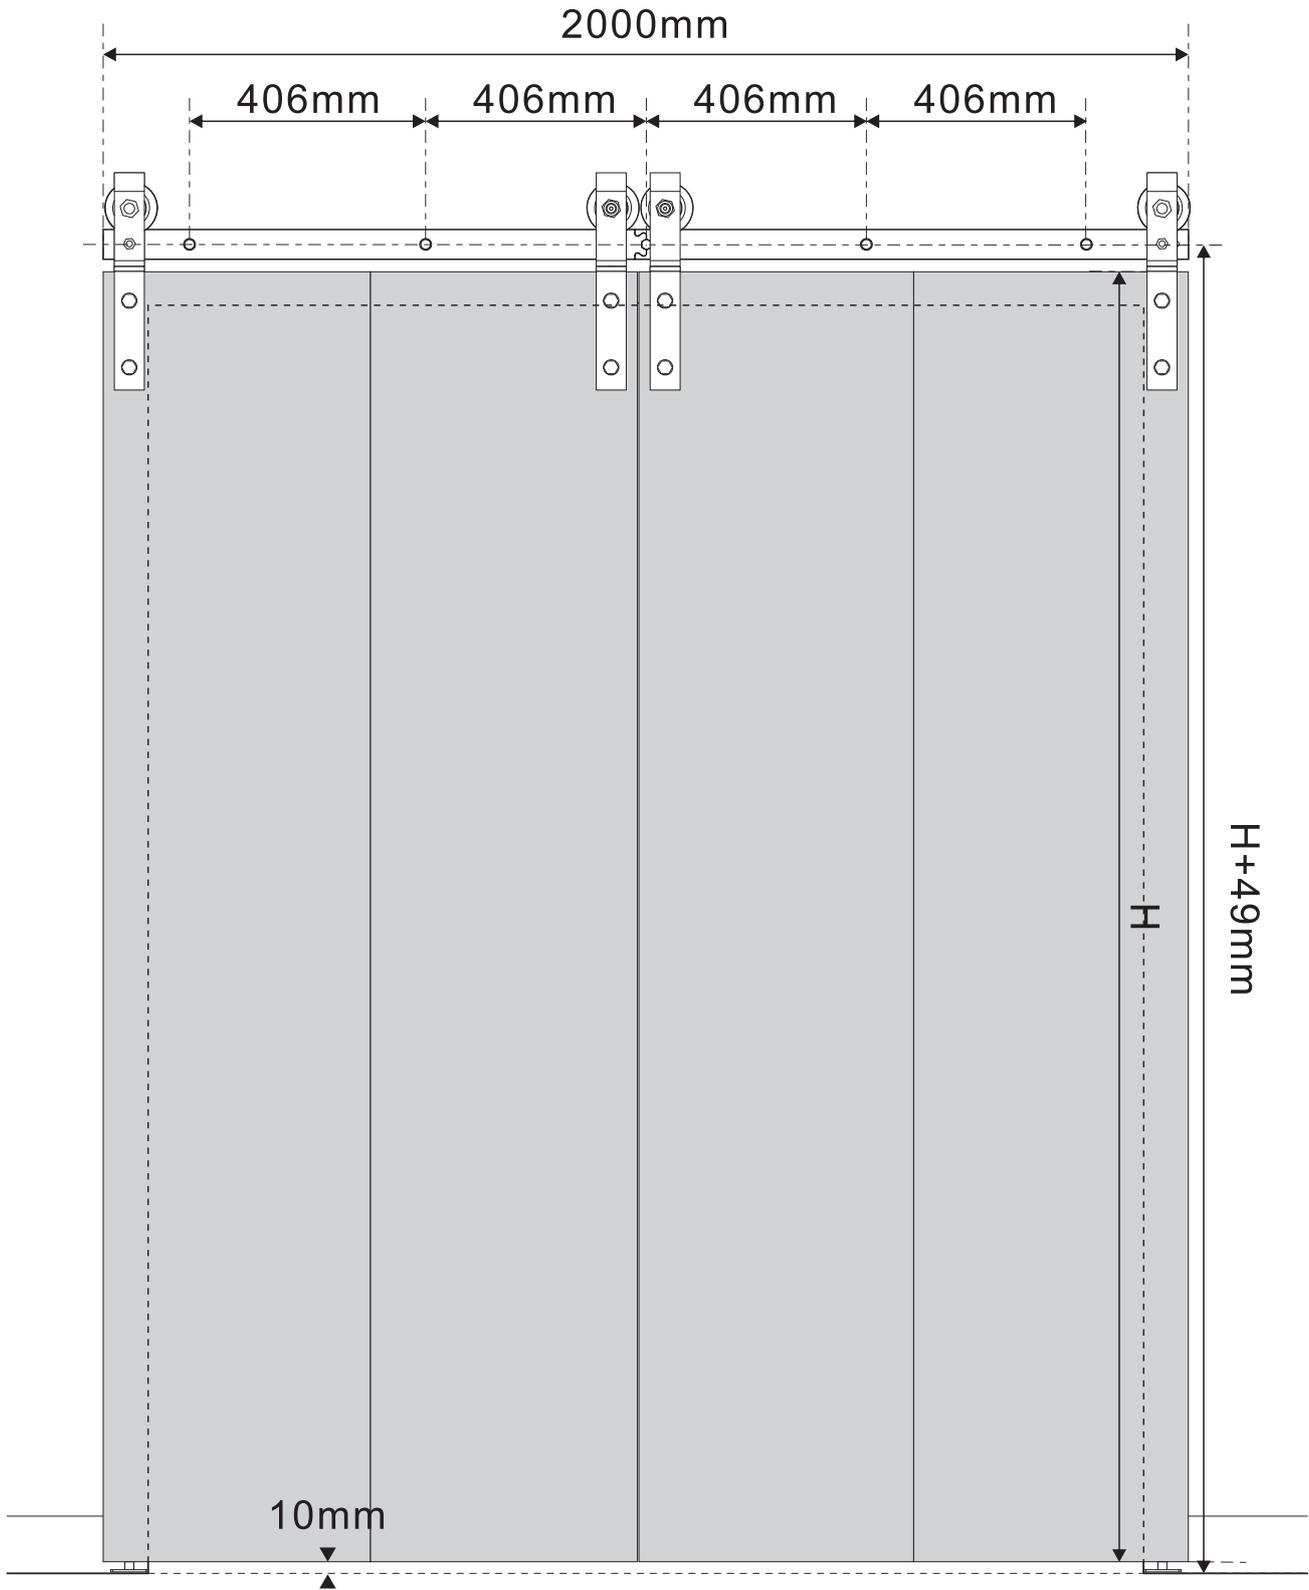



Installation

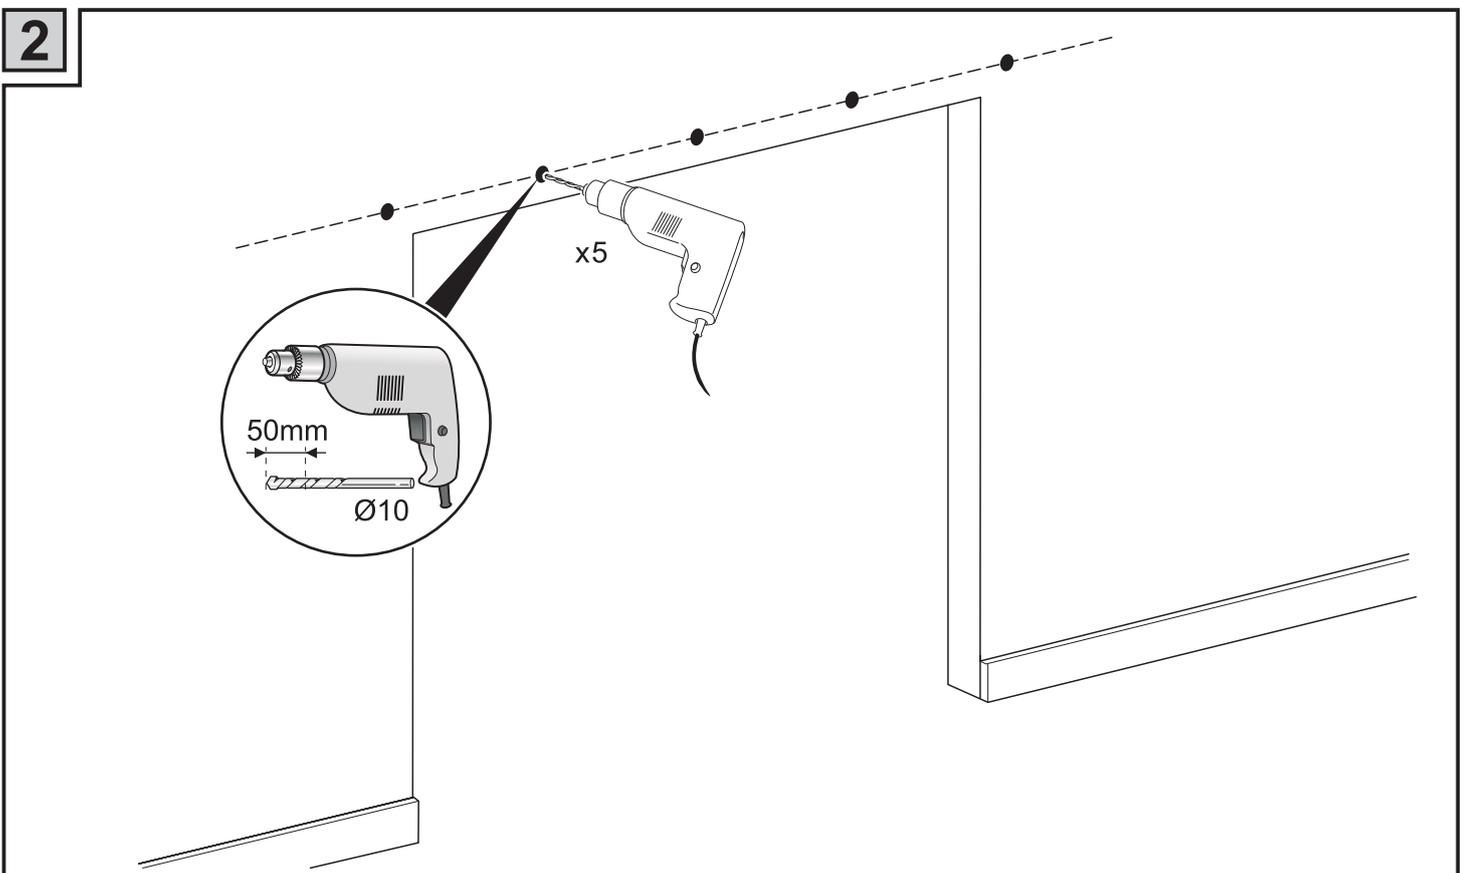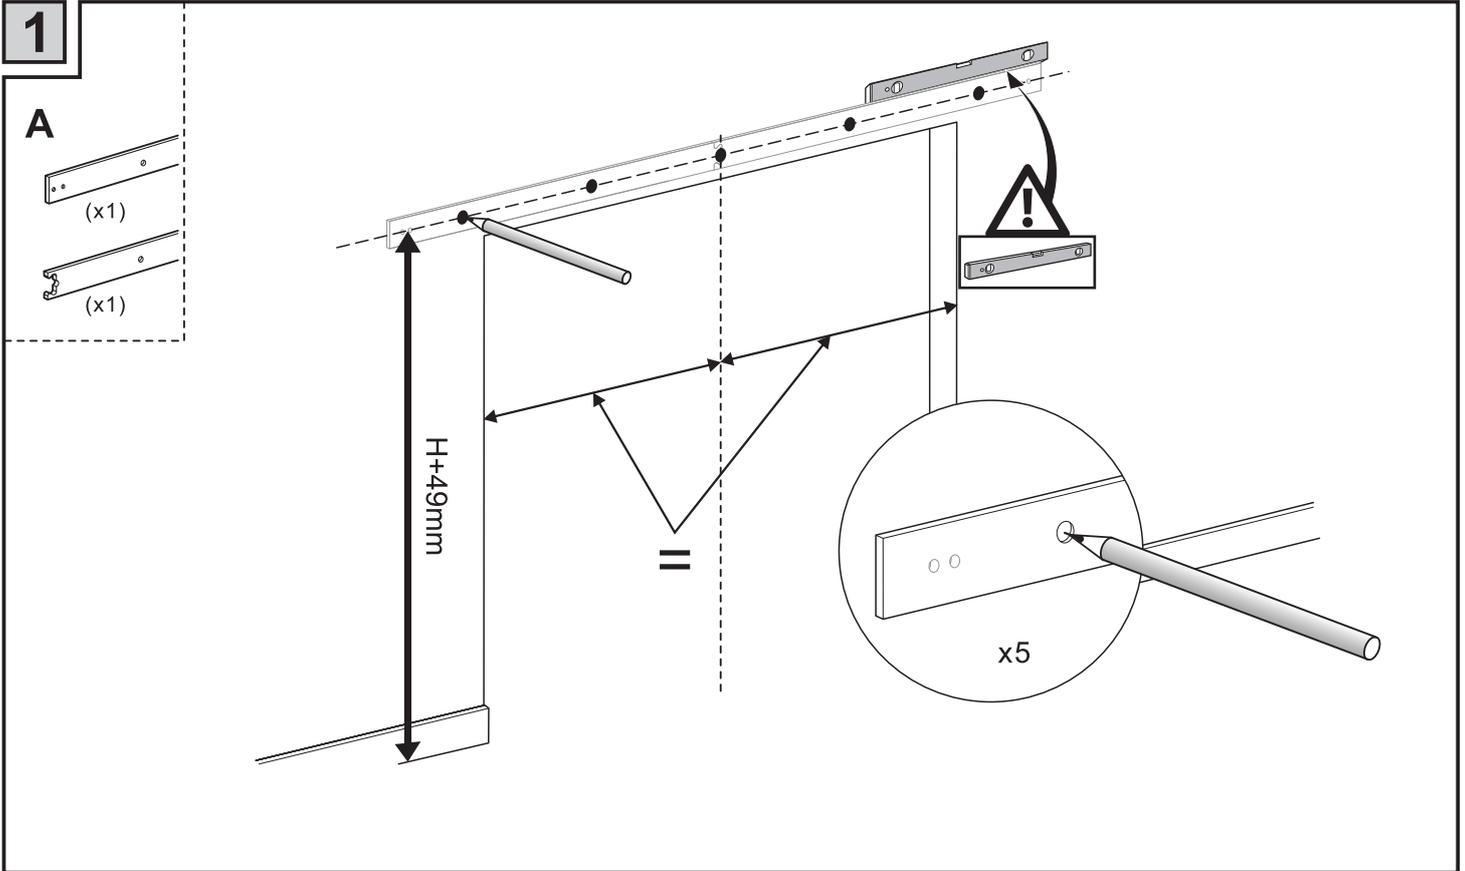


Installation

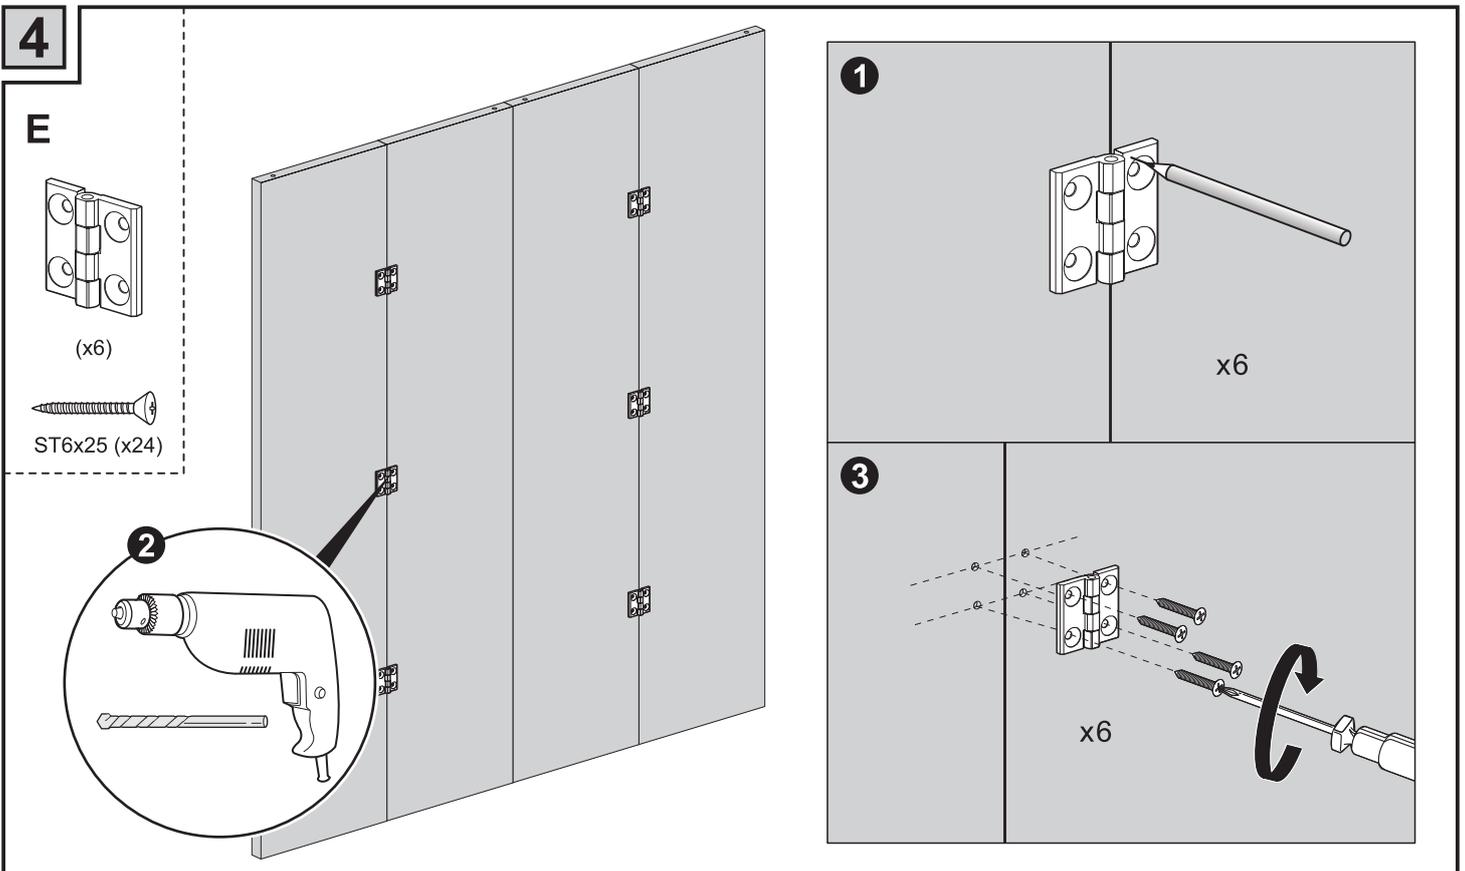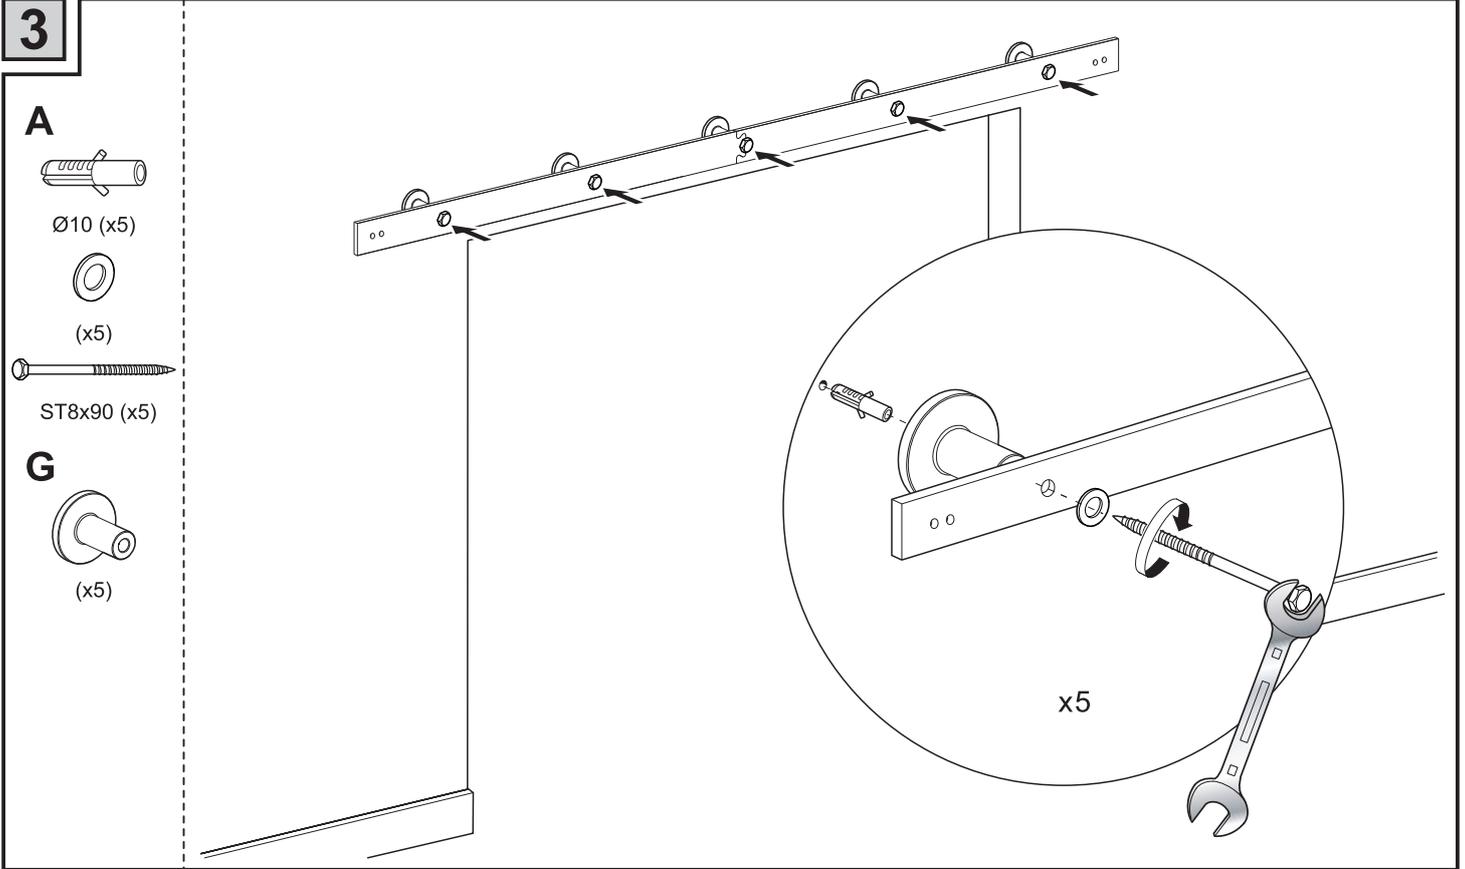


Installation

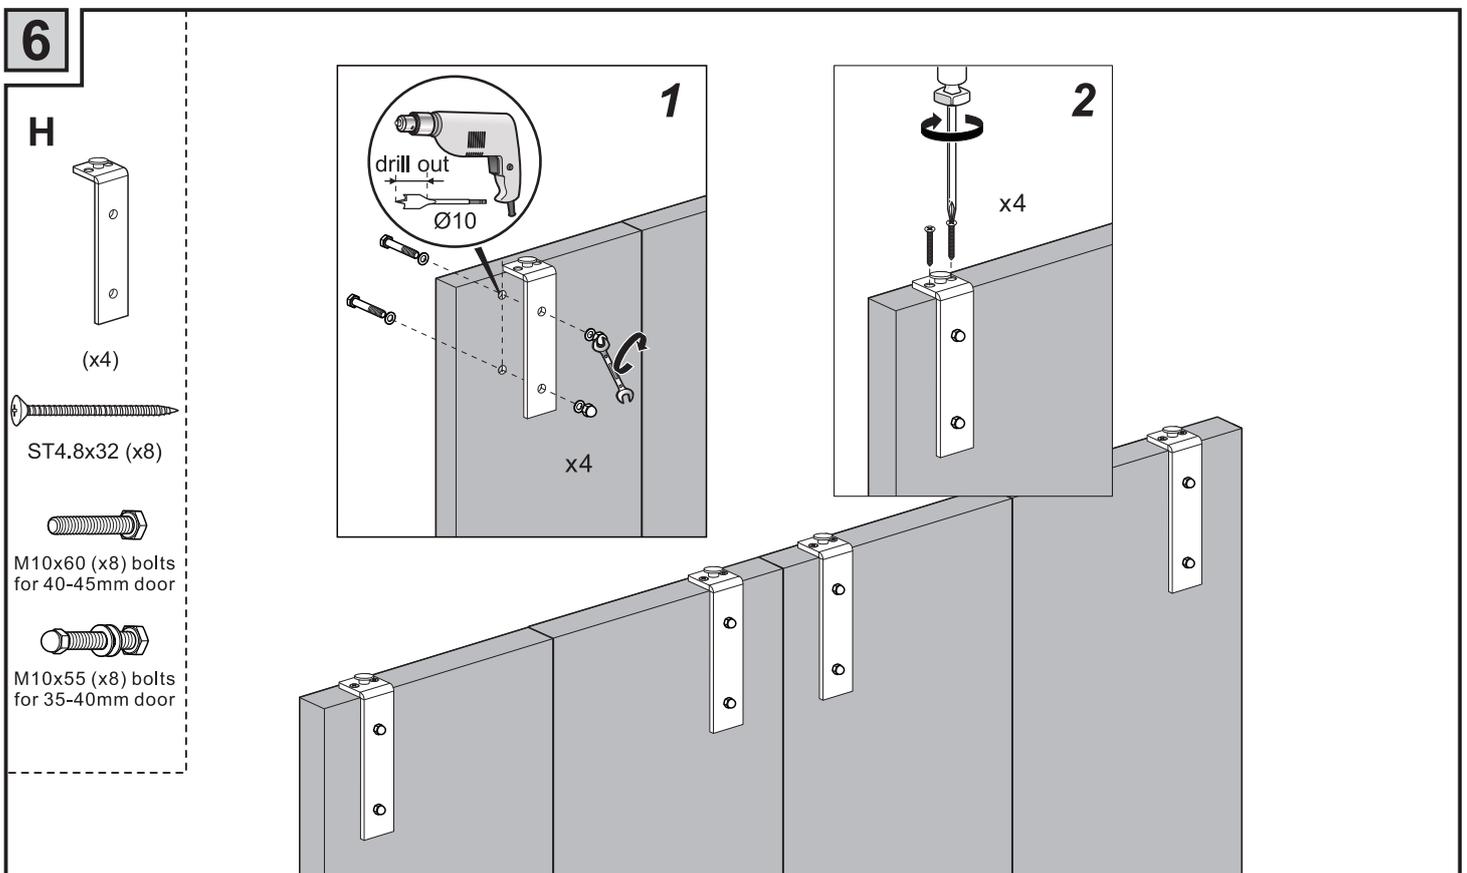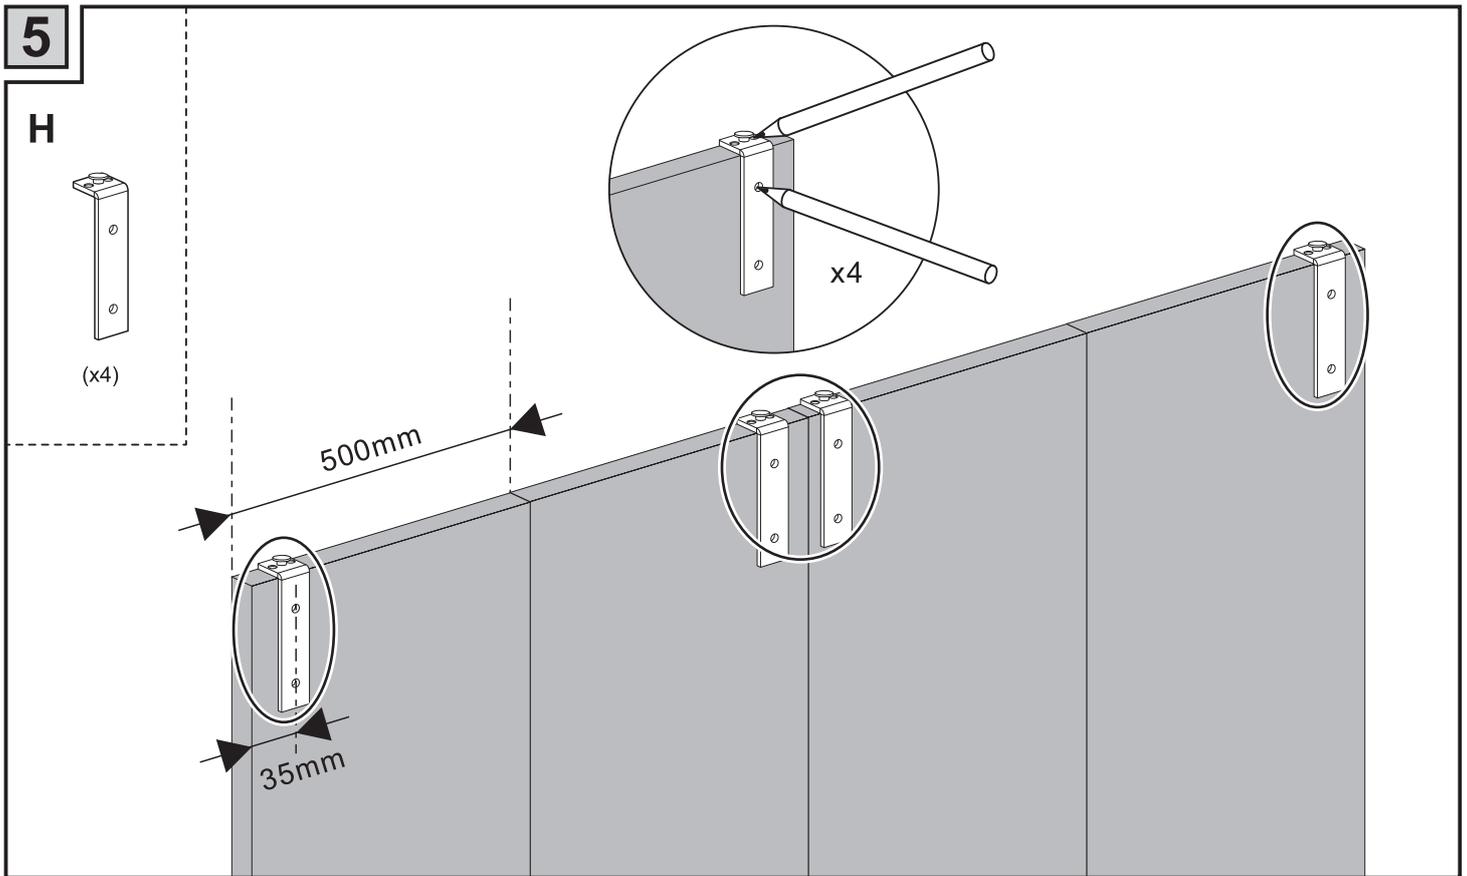

Installation

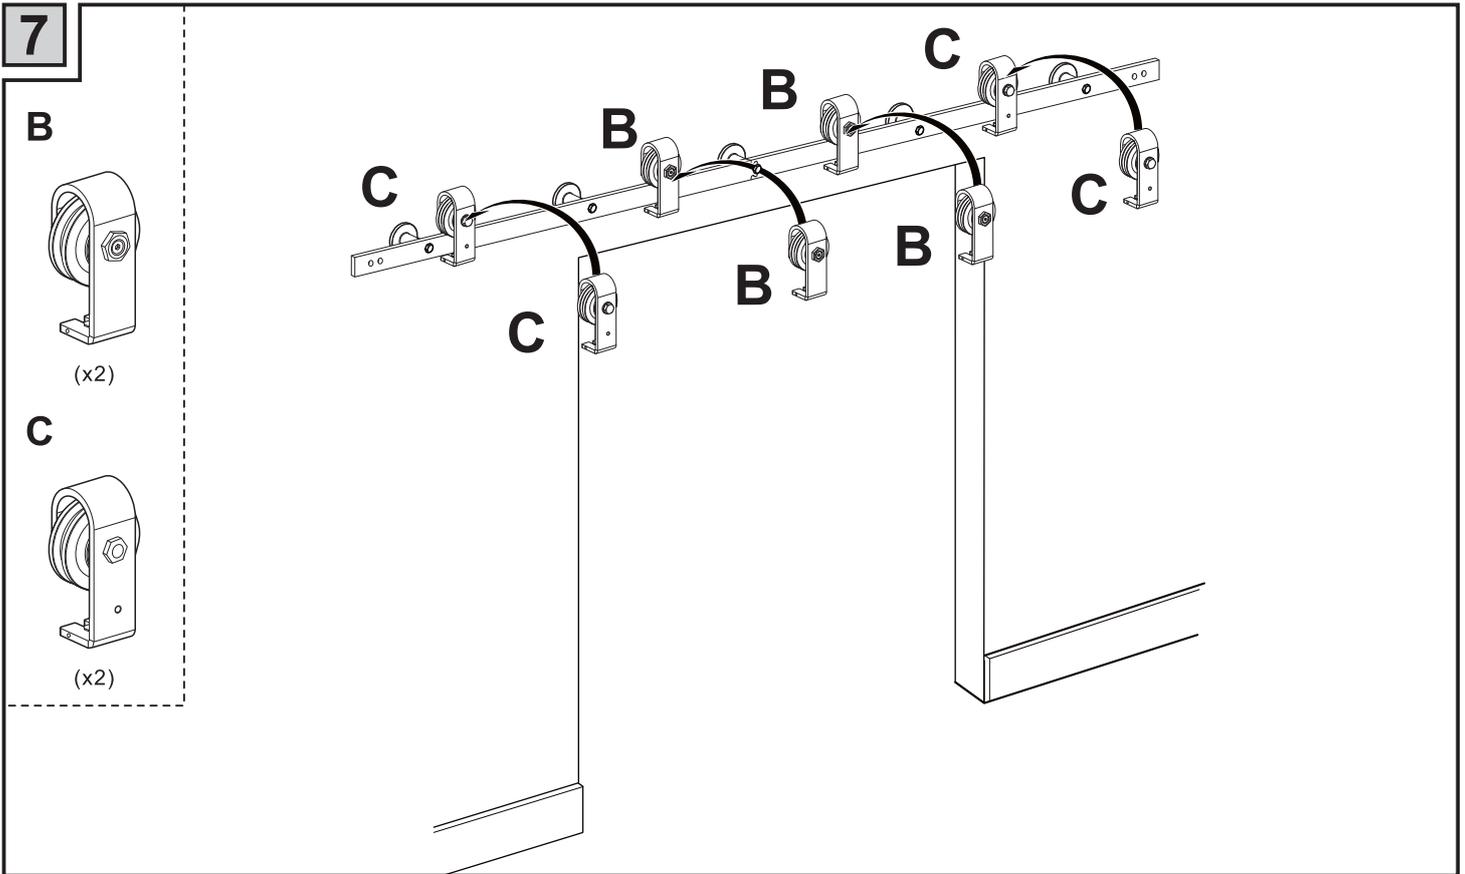

Installation of wooden door stopper

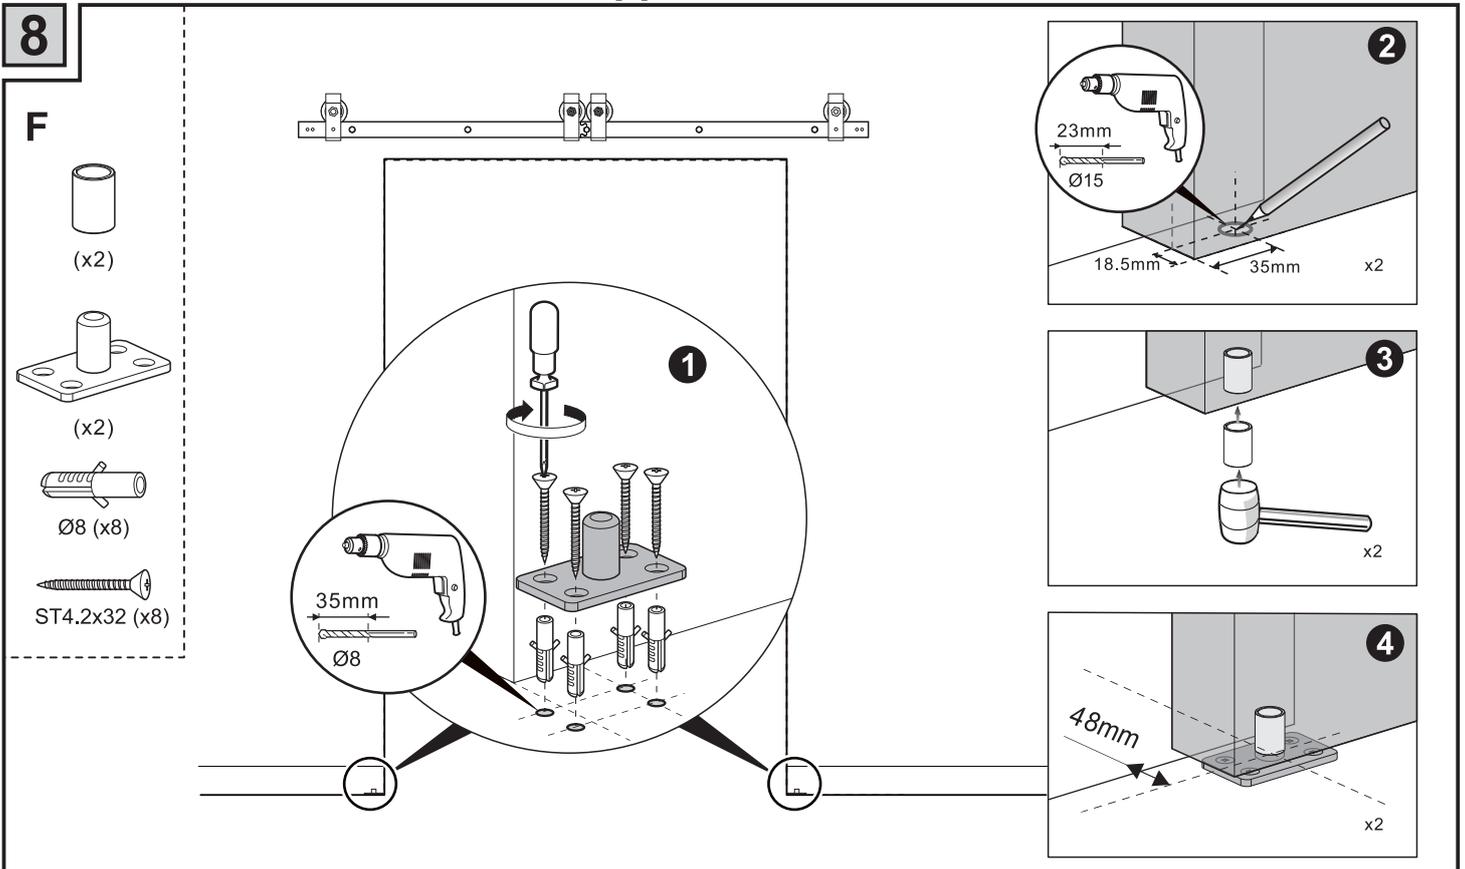

Installation


Installation of iron frame door stopper

8

F



(x2)






(x2)




Ø8 (x8)




ST4.2x32 (x8)

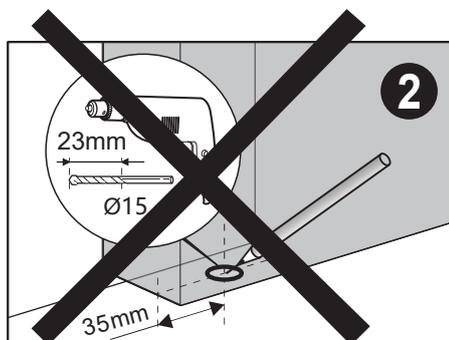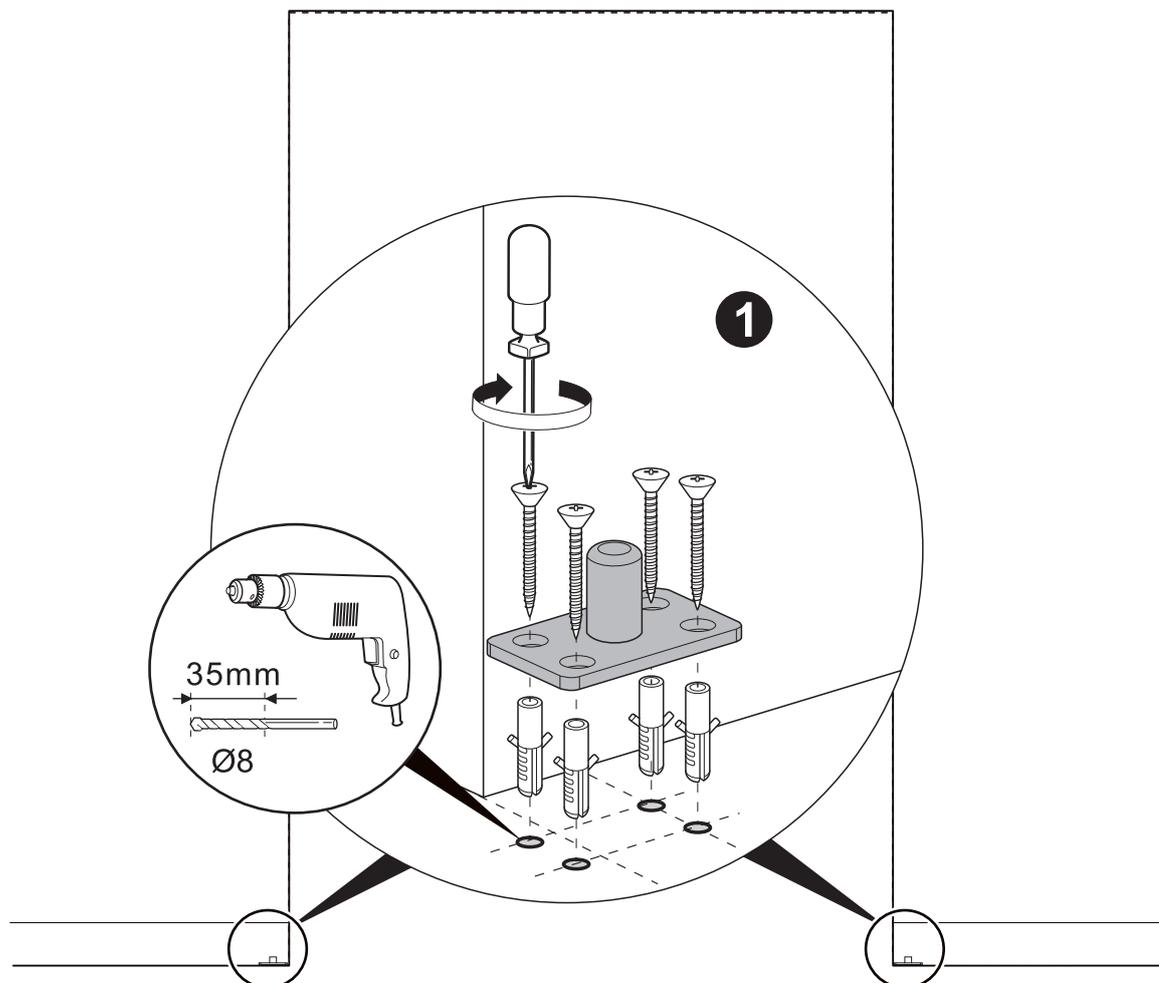

2

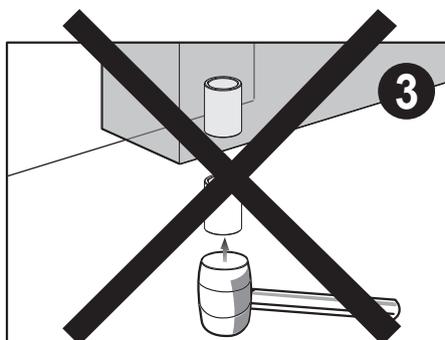

3

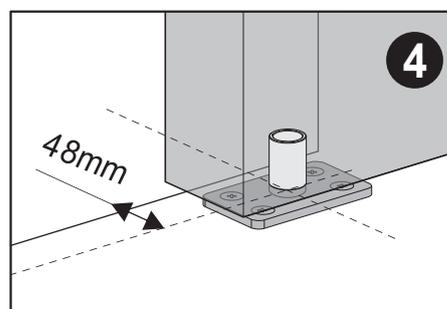





4

The hole positions at the bottom of the iron frame door need to be factory-configured

Iron frame doors don't require sleeves


Installation

9

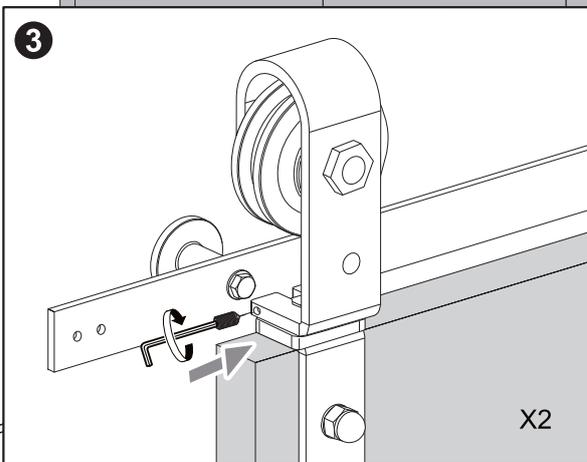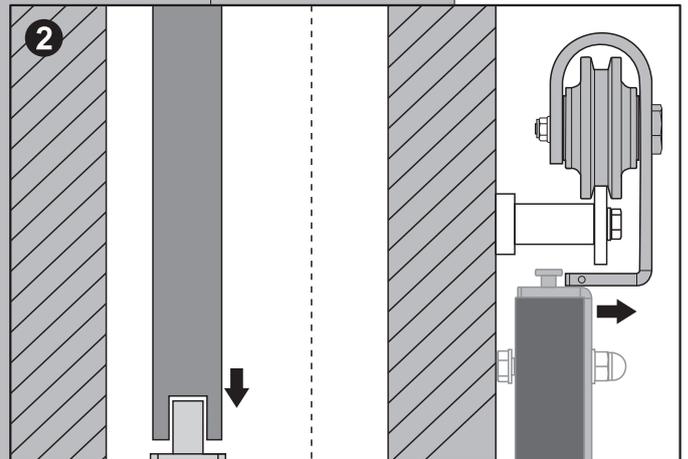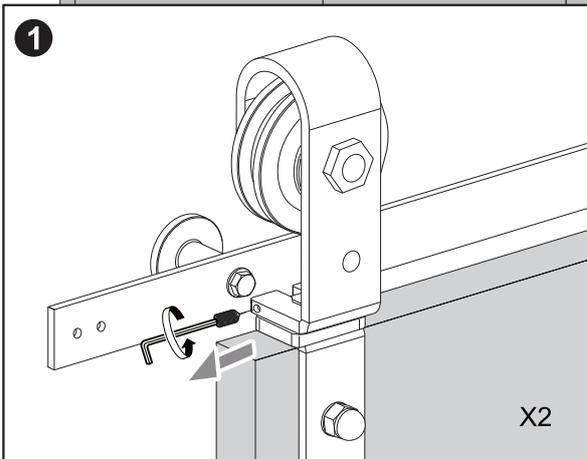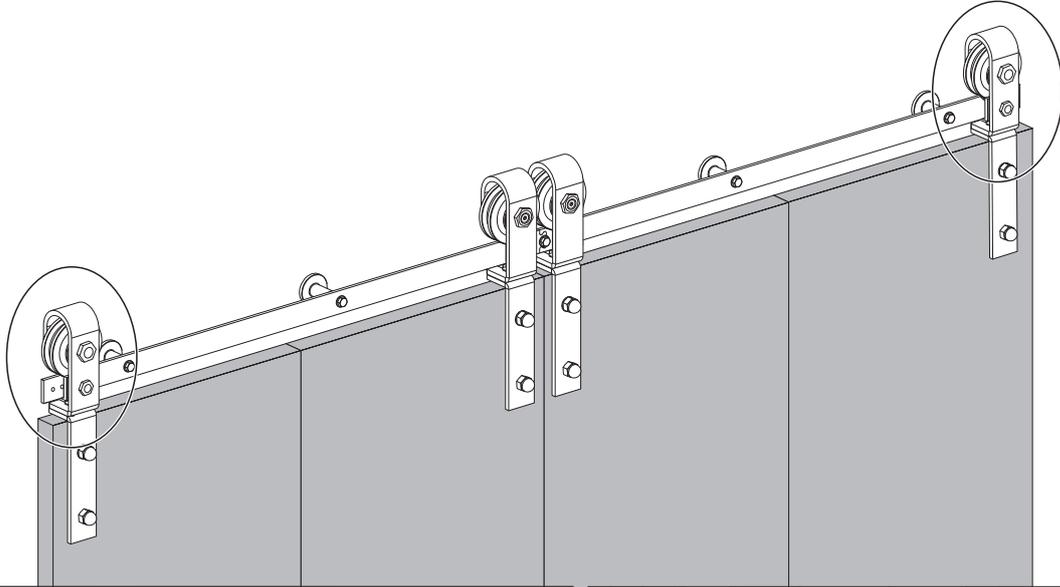

Installation

10

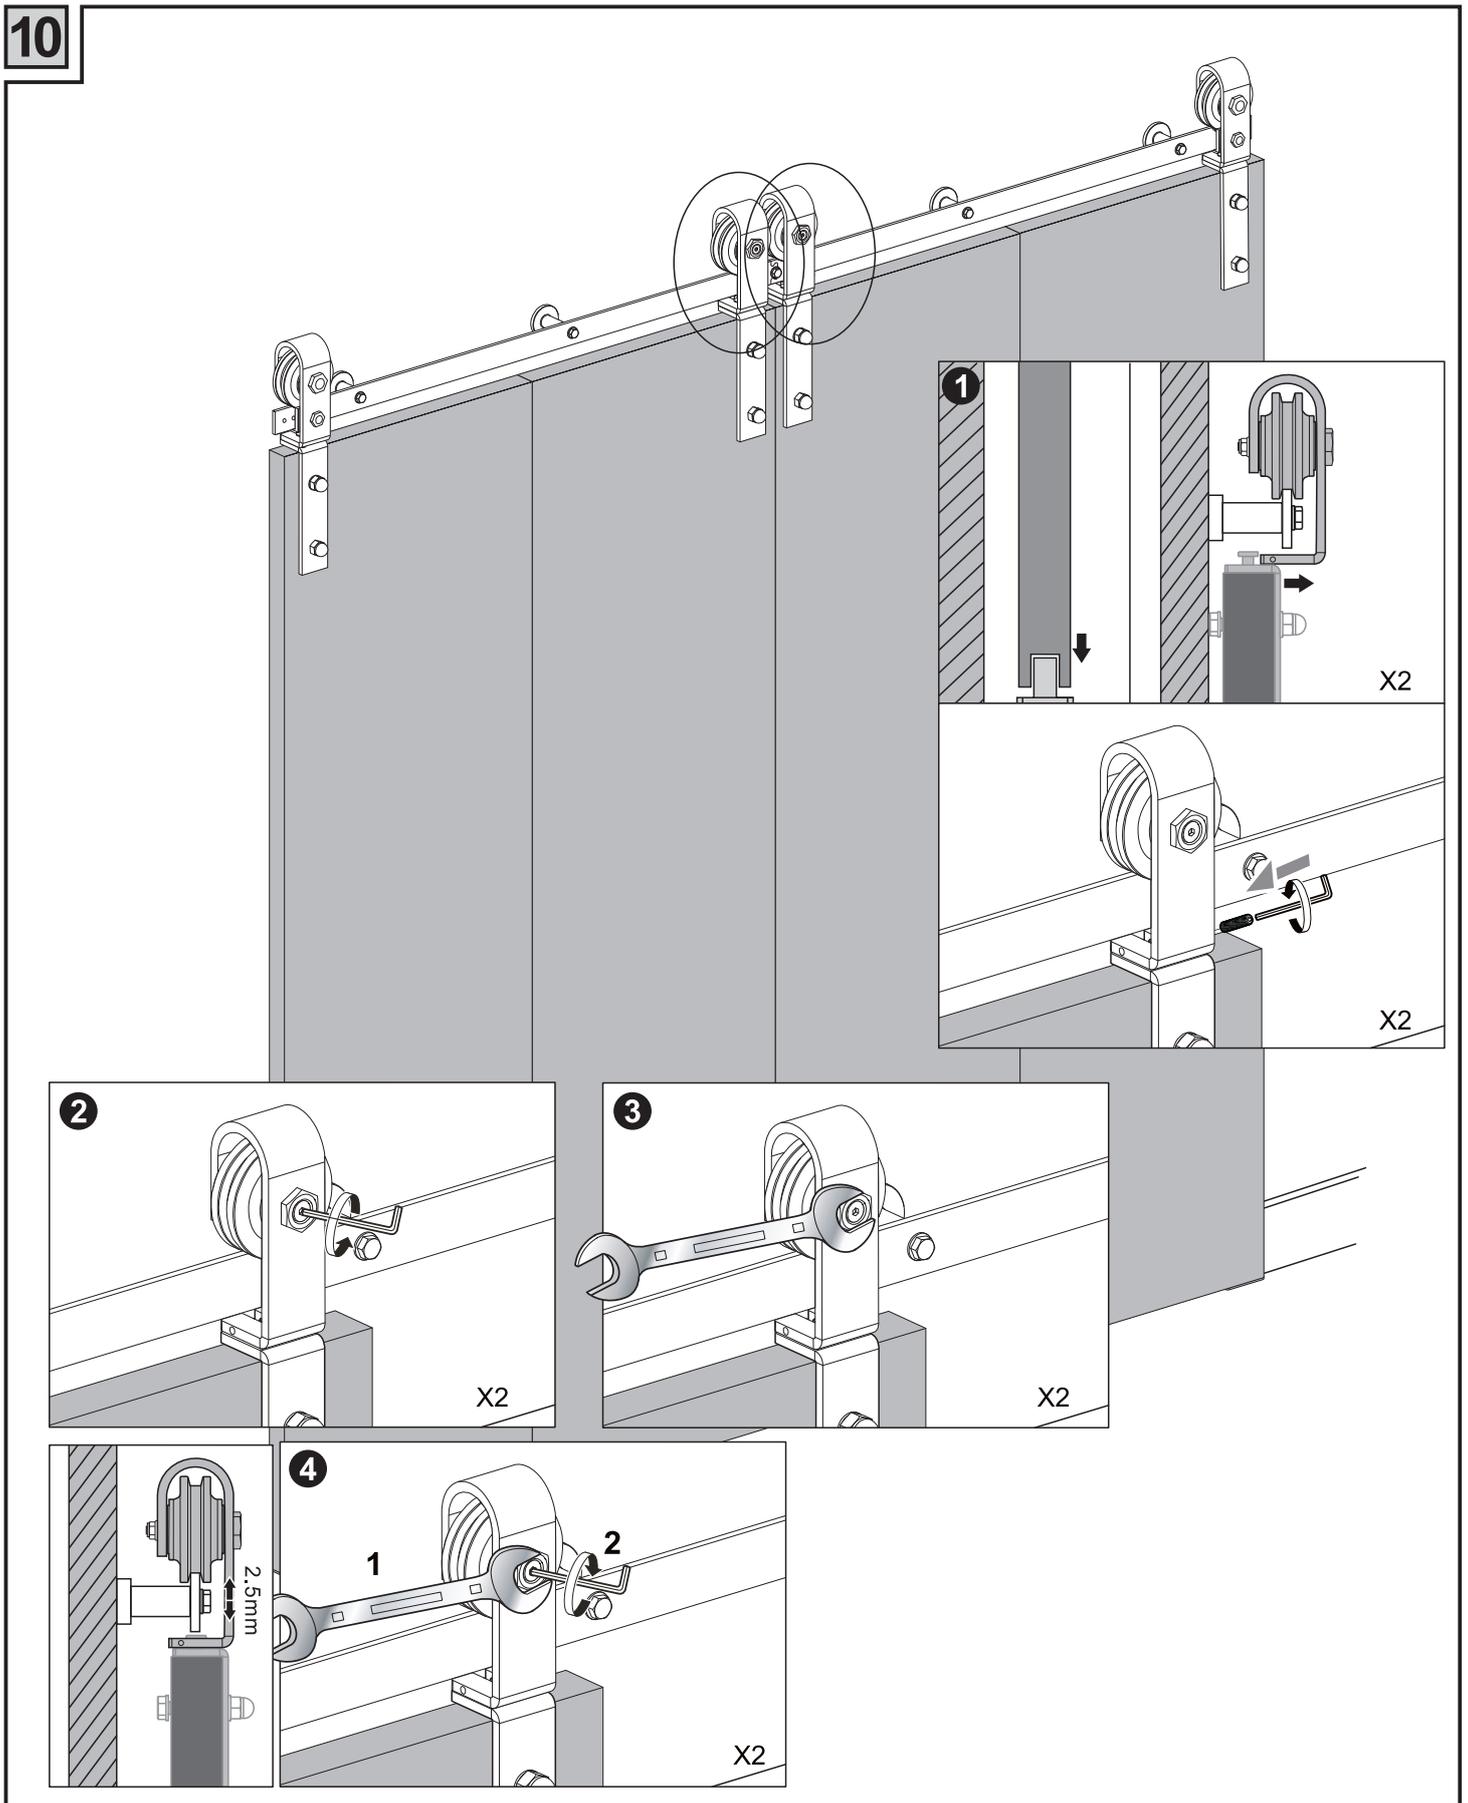

Installation

11

C




M5x26 (x2)



(x2)






D



(x2)



M5x6 (x4)

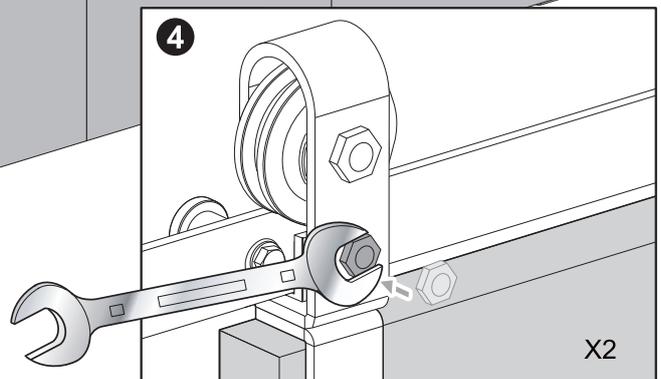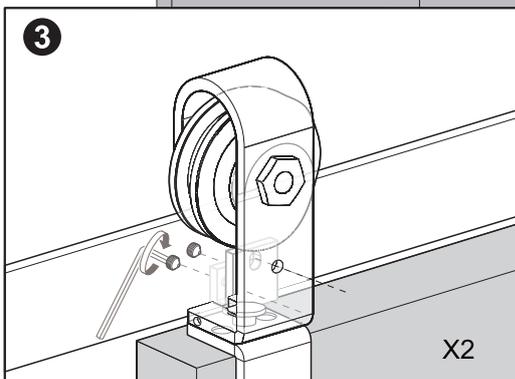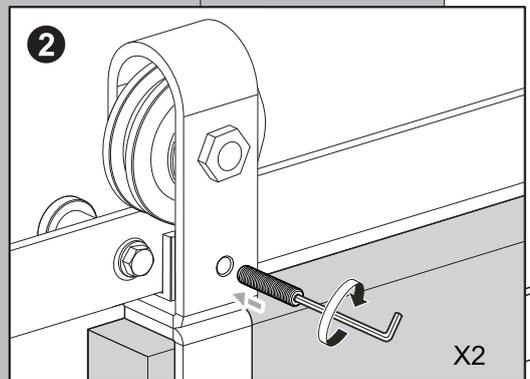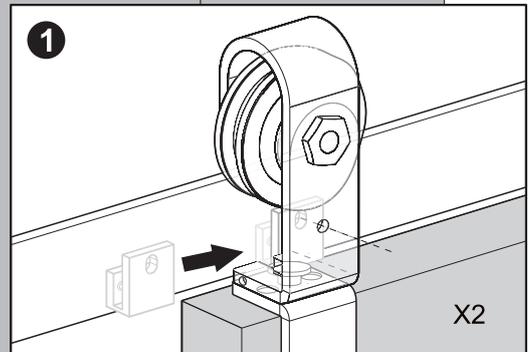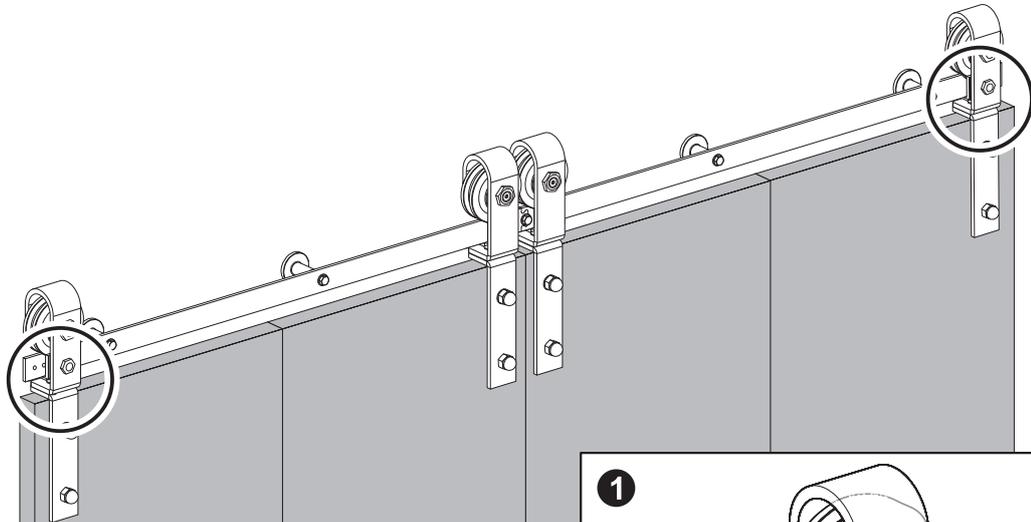


Installation

12

I



(x2)

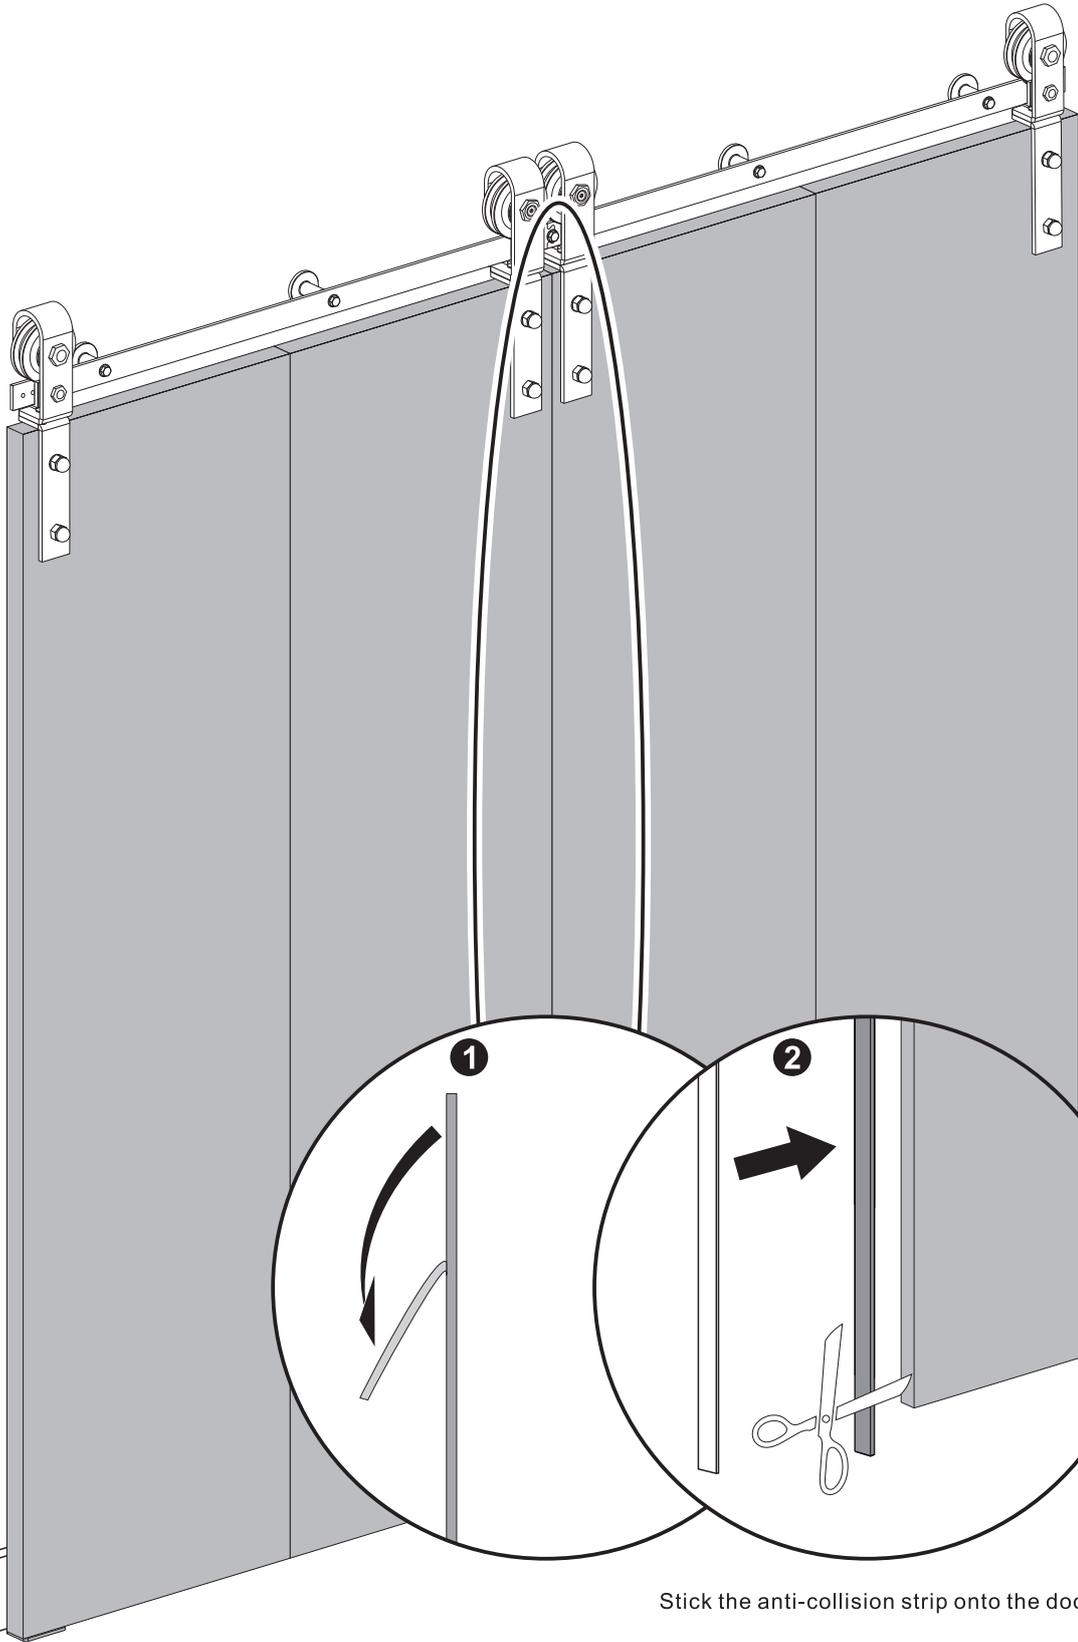

Stick the anti-collision strip onto the door frame